




MALLOCA

BUILT-IN HOOD INSTRUCTION MANUAL

Space MH 900SP

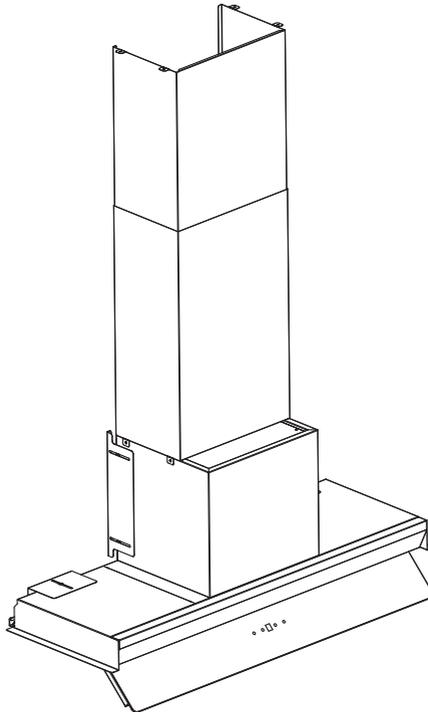

Dear Customer,

If you follow the recommendations contained in this Instruction Manual, our appliance will give you constant high performance and will remain efficient for many years to come.

Product Specification & Technical Parameters

Model	MH 900SP
Voltage	220V~50Hz
Lamp Power	4Wx1
Motor Power	230W
Total Power	234W
Diameter of Outlet Adapter	150mm
Product Dimension(WxDxH)	900x310~350x840~1220mm

RECOMMENDATIONS AND SUGGESTIONS

INSTALLATION

- * The manufacturer will not be held liable for any damages resulting from incorrect or improper installation.
- * Please read this instruction manual before installing and using this range hood. Please keep this instruction manual in a safe place for future reference.
- * Only a qualified and trained service technician can undertake the work of installation and servicing.
- * Check that the main voltage corresponds to the one indicated on the rating plate fixed inside the hood.
- * If the hood is used in conjunction with non-electrical appliances (e. g. gas burning appliances), a sufficient degree of ventilation must be guaranteed in the room in order to prevent the backflow of exhaust gas. The kitchen must have an opening directly with the open air in order to guarantee the entry of clean air.
- * The minimum distance is 750mm from the range hood to a gas hob, and is 650mm to an electric hob. If the installation instructions for gas hobs specify

a greater distance, this must be taken into account.

NOTICE: Two or more people are required to install or move this appliance. Failure to do so can cause physical injuries.

USE

- * The range hood has been designed only for domestic use to eliminate kitchen fumes.
- * Never use the hood for purposes other than what it has been designed for.
- * Never leave high naked flames under the hood when it is in operation.
- * Adjust the flame intensity to direct it onto the bottom of the pan only; making sure that it does not engulf the pan sides.
- * Deep fat fryer must be continuously monitored during use: overheated oil can burst into flame.
- * The hood should not be used by children or persons not instructed in its correct use.

MAINTENANCE

- * Proper maintenance of the range hood will assure proper performance of the unit.
- * Disconnect the hood from the main supply before carrying out any maintenance work.
- * Clean and/or replace aluminum grease filters and activated charcoal filters after specified period of time.
- * Clean the hood using a damp cloth and a neutral liquid detergent.
- * **DISPOSAL:** Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

WARNING!!

In certain circumstances electrical appliances may be a danger hazard.

- * Do not check the status of the filters while the cooker hood is operating
- * Do not touch the light bulbs after appliance use
- * Do not disconnect the appliance with wet hands.
- * To reduce the risk of fire or electric shock, do not use this fan with any solid-state.
- * Avoid free flame, as it would do damage to the filters from a fire hazard
- * Constantly check food frying to avoid that the overheated oil may become a fire hazard
- * Disconnect the electrical plug prior to any maintenance or servicing.
- * Children don't recognize the risks of electrical appliances. Therefore use or keep the appliance only under supervision of adults and out of the reach from children.

* TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:


- a) Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
- b) Sufficient air is needed for proper combustion and exhausting of gases through the flue (chimney) of fuel burning equipment to prevent back drafting.
- c) When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.
- d) Ducted fans must always be vented to the outdoors.

- * Don't use this product outdoors.
- * This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction, concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- * There shall be adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels.
- * There is a fire risk if cleaning is not carried out in accordance with instructions.

* The exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.

CHARACTERISTICS


DIMENSIONS

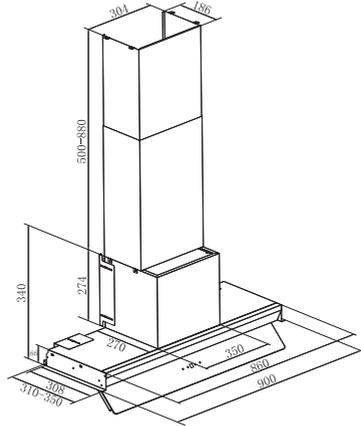

INSTALLATION & USE

OPERATION OF CONTROLS

The control panel is shown below:

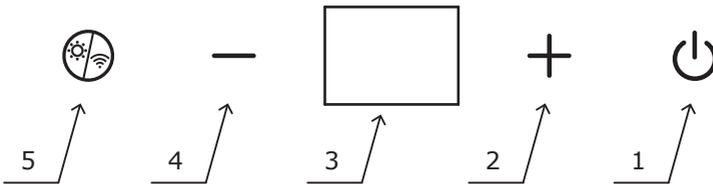

The control panel is equipped with touch control which has WIFI function:
Control functions are described below:

- 1-Stand-by mode sensor
- 2-Increase fan speed sensor
- 3-Display
- 4-Reduce fan speed sensor
- 5-Light/WIFI control sensor

When you plug in the appliance to power, it will emit a short beep and all

sensor will light for a second, then all sensor will go off.

Touch  to activate the appliance----the  pictogram will light up, the "00" will be shown on the display, the appliance is now in stand-by mode. In stand-by mode, if there is no operation in 5 minutes, the appliance will be off.

When activated, touch + to start the fan.

Available fan speeds:

*Low speed(F1). Use this speed when cooking a little food with hardly any fumes.

*Medium speed(F2). Use this speed when cooking multiple dishes at the same time with moderate amount of fumes.

*High speed(F3). Use this speed when frying or grilling with large amount of fumes.

Use the + and - sensors to increase or reduce fan speed.

Touch  sensor to turn the lighting on. Touch  again to turn the lighting off. The lighting operates independently of fan.

Off-Timer

Use off-Timer to turn off the hood after a specified time. Use Off-Timer to filter the fumes out of the air after cooking.

Touch and hold  sensor for 3 seconds to activate the Off-Timer when the motor is running. The sensor flash and the display shows 15. Now use the - and + sensors to select the Off-Timer delay. The Off-Timer can be set to 1-15minutes. If there is no operation in 3 seconds, the Off-Timer will start to work base on the shown time. Touch  /-/+ sensor to deactivate the Off-Timer at any time.

WIFI

First step: Download "Tuya Smart" App

If your phone has already been installed "Tuya Smart" App and logged in it, please skip this step.





Please download and install "Tuya Smart" App by scanning above QR code, register and log in to the app. If download failed, try to search for the app in an app store.


Second step: Connecting network

When you plug in the appliance to power, touch and hold  sensor for 3 seconds to activate the WIFI function under the WIFI environment, the sensor flash.

Make sure the phone is connected to a WIFI network, then turn on the "Tuya Smart" App to add the device on home page.

Turn on the Bluetooth to add the device easily. It can be added by manually select or automatically discover. Input the WIFI name and WIFI password to connect the device. After connecting successfully, the background light of  sensor will circularly be on for 3 seconds and off for 3 seconds, it will be off after 3 minutes. If connect failed, please try to connect again. After adding the device, the Bluetooth can be turn off.

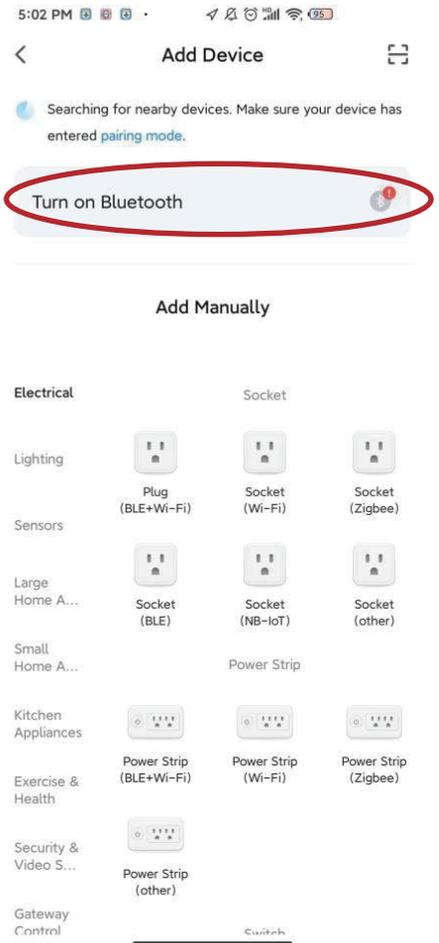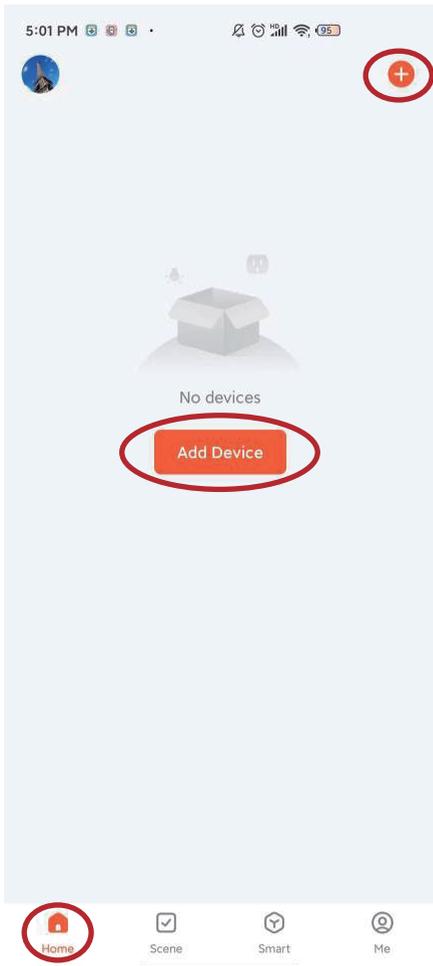

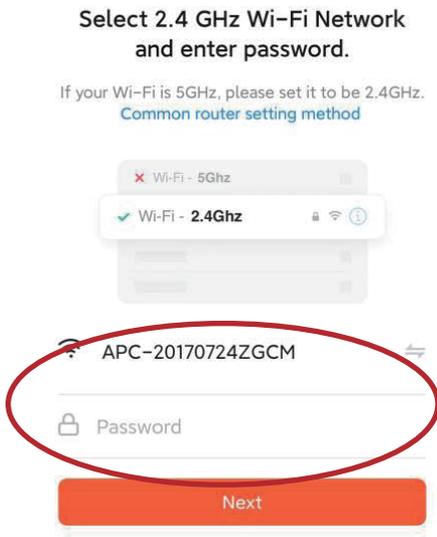

Remarks:

1. The hood only can be controlled by one phone.
2. If connect failed, please kindly check if the password of WIFI is correct or not, if the WIFI network is 2.4G or not.
3. If some phones connect failed, please pull the plug for 5 seconds and then plug it in again and try again.

Grease Filters

The grease filters should be cleaned frequently. Use a warm detergent solution. Grease filters are washable. See "INSTALL FILTERS" section for removal and installation instructions.

Non-Ducted Recirculation charcoal filter

The non-ducted recirculation charcoal filter should be changed every 6 months.


See "INSTALL FILTERS" section for removal and installation instructions.

INSTALL THE DUCTWORK

(DUCTED HOODS ONLY)

Caution: To reduce the risk of fire, use metal ductwork is preferred.

1. Decide where the ductwork will run between the hood and the outside.
2. A straight, short duct run will allow the hood to perform most efficiently.
3. Long duct runs, elbows, and transitions will reduce the performance of the hood. Use as few of them as possible. Larger ducting may be required for best performance with longer duct runs.
4. The air must not be discharge into a flue that is used for exhausting fumes from appliances burning gas or other fuels" "Regulations concerning the discharge of air have to be fulfilled.
5. Install wall cap. Connect round metal ductwork to cap and work back towards hood location. Use duct tape to seal the joints between ductwork sections.

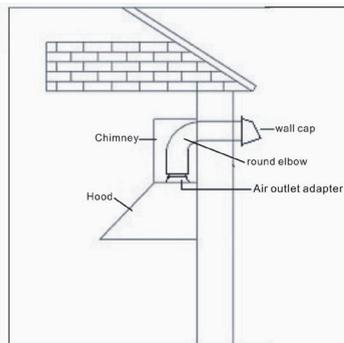

INSTALL ELECTRICAL

Electrical wiring must be done by a qualified person(s) in accordance with all applicable codes and standards. This range hood must be properly grounded. Turn off electrical power at service entrance before wiring.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

INSTALL THE HOOD

Note 1 : On stainless steel hoods, carefully remove the plastic protective film from all exterior surfaces of the hood and chimney prior to final installation.



Note 2: At least two people will be required to mount the hood.







INSTALL THE HOOD

Minimum hood distance above cooker must not be less than 650mm.

A maximum of 750mm above the cooker is highly recommended for best capture of cooking impurities.

Distance over 750mm above the cooker are at the installer's and user's discretion - providing that ceiling height and flue length permit.

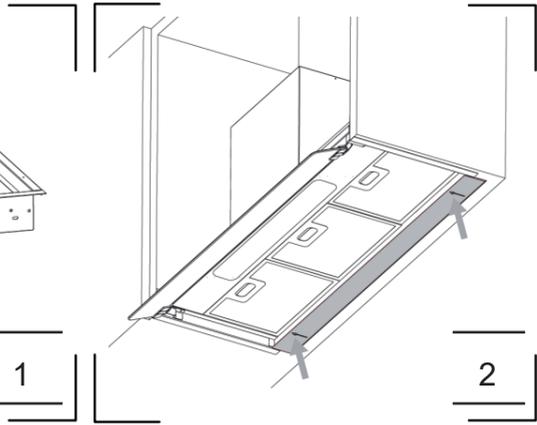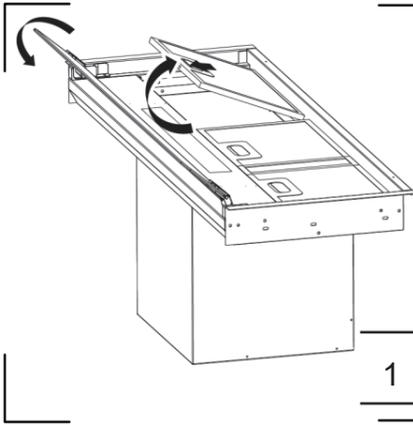

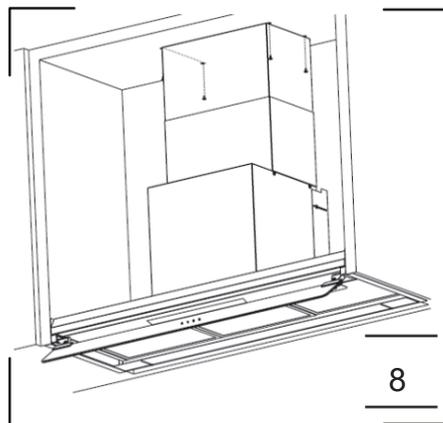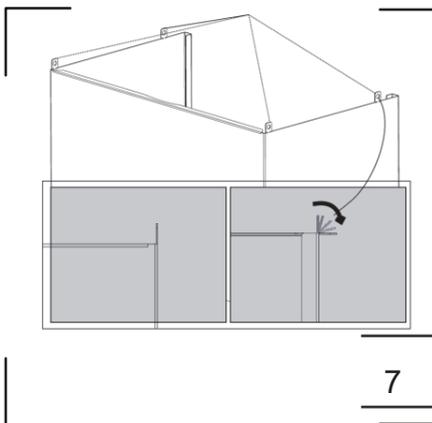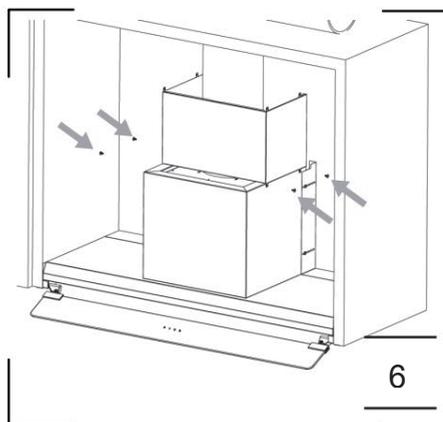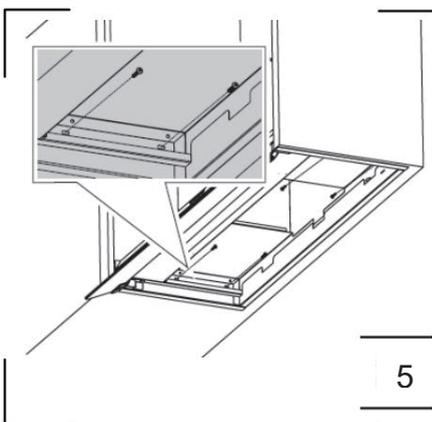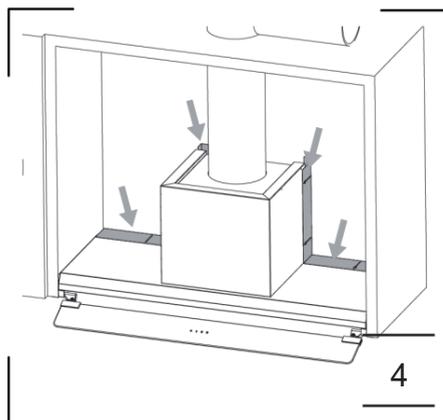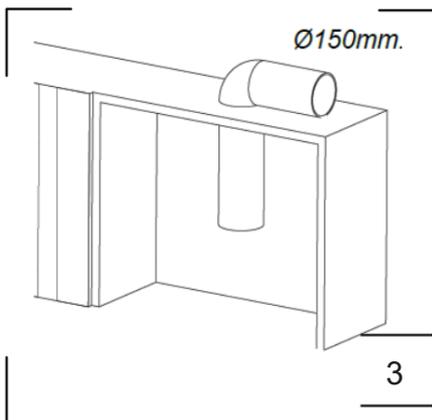

INSTALL FILTERS

1. To remove the grease filter, push in on the metal latch tab. This will disengage the filter from the hood. Tilt the filter downward and remove.
2. To install the grease filter, align rear filter tabs with slots in the hood. Push in the metal latch tab, push filter into position and release. Make sure the filter is securely engaged after assembly.
3. To install the charcoal filter, secure the charcoal filter to the motor housing by turning clockwise. To take the charcoal filter down from the motor housing by turning anticlockwise.
4. Install grease filter after charcoal filter is installed.

MALLOCA VIETNAM COMPANY LIMITED

Showroom:

279 Nguyen Van Troi Street, Ward 10, Phu Nhuan District, HCM City

Tel: (84) 28 39975 893 / 94

Fax: (84) 28 38447 102 - (84) 28 38633 882

Email: info@malloca.com

Customer Care:

Hotline: 1800 12 12

Email: chamsockh@malloca.com

CÔNG TY TNHH MALLOCA VIỆT NAM

Showroom Malloca TP.Hồ Chí Minh:

279 Đường Nguyễn Văn Trỗi, Phường 10, Quận Phú Nhuận, TP.HCM

Điện Thoại: (84) 28 39975 893 / 94

Fax: (84) 28 38447 102 - (84) 28 38633 882

Email: info@malloca.com

Showroom Malloca Hà Nội:

10 Chương Dương Độ, Phường Chương Dương, Quận Hoàn Kiếm, Hà Nội

SĐT: (024) 35376 288 – 093 462 92 98

Showroom Malloca Đà Nẵng:

211 Nguyễn Văn Linh, Phường Vĩnh Trung, Quận Thanh Khê, TP. Đà Nẵng

SĐT: (0236) 369 1906

451 Điện Biên Phủ, Phường Hòa Khê, Quận Thanh Khê, TP. Đà Nẵng

SĐT: (0236) 7303 268

Hệ thống chăm sóc khách hàng:

Hotline: 1800 12 12

Email: chamsockh@malloca.com

Khu vực Bà Rịa Vũng Tàu

258-260A Lê Hồng Phong, Phường 4, TP. Vũng Tàu

SĐT: (0254) 385 94

99 Khu vực Tây Nguyên

331 Phan Đình Phùng, Phường 2, TP. Đà Lạt

SĐT: (0263) 3521 107 – 0918226362

Khu vực Nam Trung Bộ

08 Lê Hồng Phong, Phường Phước Hải, TP. Nha Trang

SĐT: (0258) 3875

488 Khu vực Miền Tây

180 Trần Hưng Đạo, Phường An Nghiệp, Quận Ninh Kiều, TP. Cần Thơ

SĐT: (0292) 373

2035 Khu vực Cà Mau

180 T28 Lý Văn Lâm, Khóm 4, Phường 1, TP. Cà Mau

SĐT: (0290) 3832 152



