MALLOCA

WASHING MACHINE

MÁY GIẶT

INSTRUCTION MANUA

HƯỚNG DẪN SỬ DỤNG

Model : MWM-C1903E

Before using your washing machine,please read this manual carefully and keep it for future reference.

Read This Manual

Inside you will find many helpful hints on how to use and maintain your washing machine properly. Just a little preventative care on your part can save you a great deal of time and money over the life of your washing machine. You'll find many answers to common problems in the chart of troubleshooting tips. If you review the chart of Troubleshooting Tips first, you may not need to call for service.

Contents

Safety Precautions 3
Overview of Washing Machine 7
Install Washing Machine 8
Operate Washing Machine 11
Checklist and Preparation before Washing Clothes 11
View of Control Panel 16
Select the procedure 17
Table of Washing Procedures 21
Maintenance 23
Cleaning and Maintenance of Washing Machine Cabinet 23
Troubleshooting 25
Remove the problems..... 26
Appendix 27
Care Lable..... 27
Product Specifications 28
Product Fiches..... 29

Safety Precautions

■ Safety Precautions

- If the supply cord is damaged,it must be replaced by the manufacturer,its service agent or similarly qualified persons in order to avoid a hazard.
- The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.
- This washing machine is for indoor use only.
- The openings must not be obstructed by a carpet.
- (This warning is only for EUROPEAN market)This appliance can be used by children aged from 8 years and above and persons with reduced physical,sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safeway and understand the hazards involved. Children shall not play with the appliance.Cleaning and user maintenance shall not be made by children without supervision.
- (This warning is not for EUROPEAN market)This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.Children should be supervised to ensure that they do not play with the appliance.
- Pull out its plug from the power socket before cleaning or maintenance.
- Make sure that all pockets are emptied.

- Sharp and rigid items such as coin,brooch,nail,screw or stone etc.may cause serious damages to this machine.
- Pull out its plug and cut off water supply after the operation.
- Please check whether the water inside the drum has been drained before opening its door.Please do not open the door if there is any water visible.
- Pets and kids may climb into the machine. Check the machine before every operation.
- Glass door may be very hot during the operation.Keep kids and pets far away from the machine during the operation.
- Take care that power voltage and frequency shall be identical to those of washing machine.
- Do not use any socket with rated current less than that of washing machine.Never pull out power plug with wet hand.
- To ensure your safety,power cord plug must be inserted into an earthed three-pole socket.Check carefully and make sure that your socket is properly and reliably earthed.
- Children of less than 3 years should be kept away unless continously supervised.
- Kids should be supervised to ensure that they do not play with the machine.
- Packing materials may be dangerous to the kids. Please keep all packing materials (plastic bags,foams etc) far away from the kids.
- Washing machine shall not be installed in bath room or very wet rooms as well as in the rooms with explosive or caustic gases.

- Make sure that the water and electrical devices must be connected by a qualified technician in accordance with the manufacturer's instructions and local safety regulations.
- Before operating this machine,all packages and transport bolts must be removed.Otherwise,the washing machine may be seriously damaged while washing the clothes.
- Before washing the clothes at first time, the washing machine shall be operated in one round of the whole procedures without the clothes inside.
- The washing machine with single inlet valve only can be connected to the cold water supply. The washing machine with double inlet valves can be connected to the hot water and cold water supply.
- Your washing machine is only for home use and is only designed for the textiles suitable for machine washing.
- Flammable and explosive or toxic solvents are forbidden. Gasoline and alcohol etc.Shall not be used as detergents. Please only select the detergents suitable for machine washing, especially for drum.
- It is forbidden to wash carpets.
- Be careful of burning when washing machine drains hot washing water.
- Never refill the water by hand during washing.
- After the program is completed, Please wait for two minutes to open the door.
- Please remember to disconnect water and power sup-

ply immediately after the clothes are washed.

- Do not climb up and sit on top cover of the machine.
- Do not lean against machine door.
- Please do not close the door with excessive forces.If it is found difficult to close the door,please check if the excessive clothes are put in or distributed well.
- The household washing machine isn't intended to be built-in.
- Cautions during Handling Machine
  1. Transport bolts shall be reinstalled to the machine by a specialized person.
  2. The accumulated water shall be drained out of the machine.
  3. Handle the machine carefully. Never hold each protruded part on the machine while lifting. Machine door can not be used as the handle during the conveyance.
- Notes on disposal:

This marking indicates that this product should not be disposed with other household wastes throughout the EU.To prevent possible harm to the environment or human health from uncontrolled waste disposal,recycle it responsibly to promote the sustainable reuse of material resources.To return your used device,please use the collection systems or contact the retailer where the product was purchased. They return and can take this product for environmental safe recycling.

Component

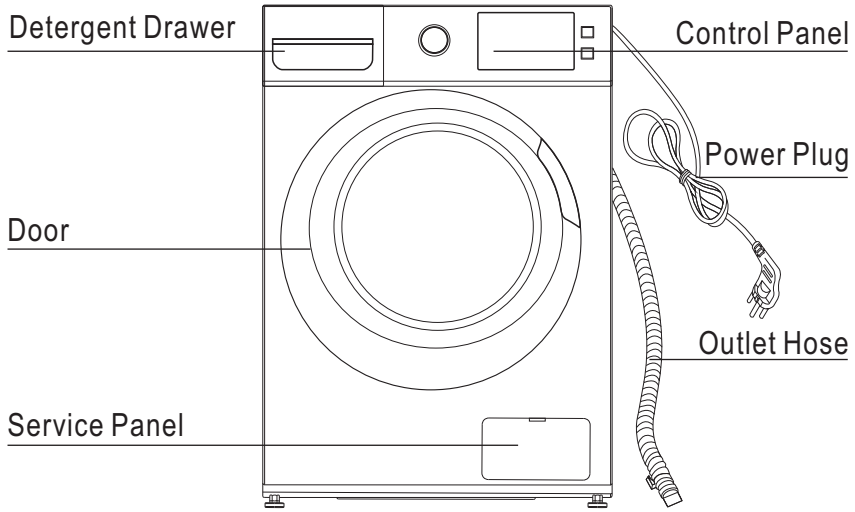

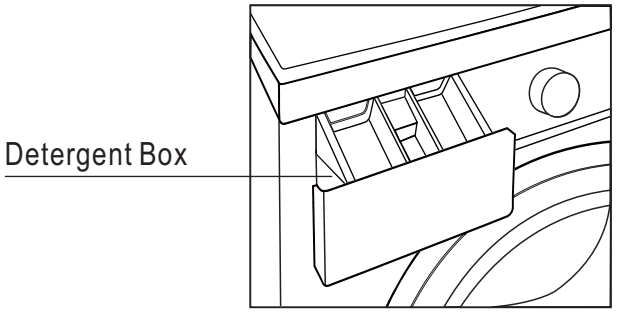

Accessories

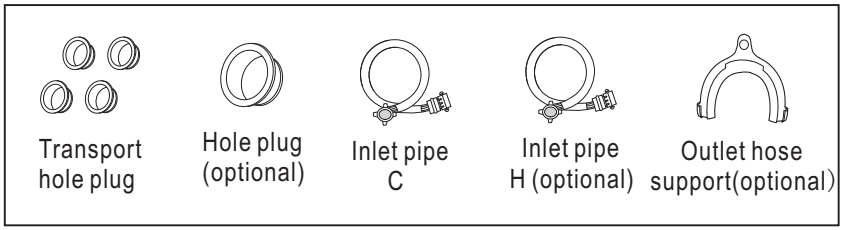

Unpacking the washing machine

Unpack your washing machine and check if there is any damage during the transportation. Also make sure that all the items in the attached bag are received.

If there is any damage to the washing machine during the transportation, or any item is missing, please contact the local dealer immediately.

Dispose the packing materials

The packing materials of this machine may be dangerous to kids. Please dispose them properly and avoid easy touch by kids. Please dispose the related packing materials according to the relevant local regulations. Please do no throw the packing materials away together with the other daily living rubbishes.

Remove transport bolts

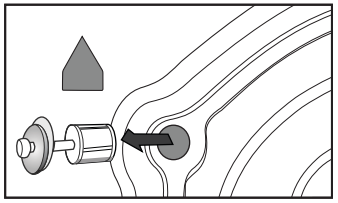

Before using this washing machine, transport bolts must be removed from the backside of this machine. Please take the following steps to remove the bolts:

1.Loosen all bolts with spanner and then remove them.
2.Stop the holes with transport hole plugs.
3.Keep the transport bolts properly for future use.

Select the location

Before installing the washing machine, the location characterized as follows shall be selected:

- Rigid, dry, and level surface (if not level, please make it level with reference to the following figure “Adjust Leg”)
- Avoid direct sunlight
- Sufficient ventilation
- Room temperature is above 0℃
- Keep far away from the heat resources such as coal or gas.

Make sure that the washing machine will not stand on power cord.

Do not install the washing machine on the carpet floor.

Adjust Leg

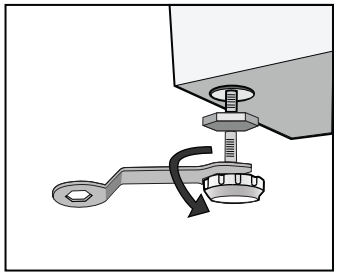

1.When positioning the washing machine, please first check if the legs are closely attached to the cabinet. If not, please turn them to their original positions with hand or spanner and tighten the nuts with spanner.
2.After positioning the washing machine, press four corners on top cover of washing machine in sequence. If the washing machine is not stable when being pressed, this leg shall be adjusted.

3.Ensure the positioning status of washing machine. Loosen the lock nut with spanner and turn the leg with hand until it closely contacts with the floor. Press the leg with one hand and fasten the nut closely to the cabinet with the other hand.
4.After being locked properly, press four corners again to make sure that they has been adjusted properly. If it is still unstable, it has to repeat Steps 2 and 3.
5.Put a solid cylinder (e.g. pop cans) oppositely on the top cover of the washing machine from in the left, right, front and back directions. If the cylinder keeps stable, the washing machine is positioned level. If it rolls, the washing machine is positioned unlevel. The rolling direction is the direction of lower ground surface. Then, the two legs in this direction shall be raised at the same time until the washing machine is level. Steps 1~3 are repeated to make the bottom legs closely against the ground and the nuts shall be locked tightly.

Connect inlet pipe

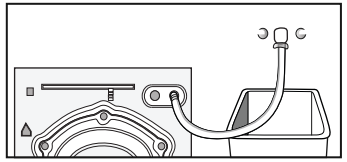

Connect the inlet pipe as indicated in the figure. For the model which has hot valve , please connect the hot vale to hot water tap. Energy will decrease automatically for some program.

Install inlet pipe

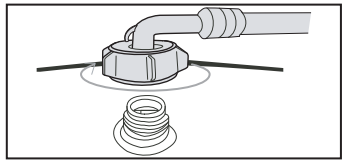

1.Connect the elbow to tap and fasten it clockwise.
2.Connect the other end of inlet pipe to the inlet valve at the backside of washing machine and fasten the pipe tightly clockwise.

Notes: after connection, if there is any leakage with hose, then repeat the steps to connect inlet pipe. The most common type of tap shall be used to supply water. If tap is square or too big, then standard tap shall be changed.

Hole plug

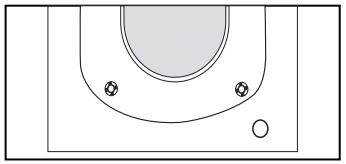

This Hole plug is used to jam the hole on the back cabinet.

Place outlet hose

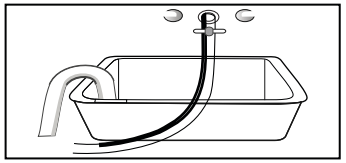

There are two ways to place the end of outlet hose:

1.Put it beside the water trough.

2.Connect it to the branch drain pipe of the trough.

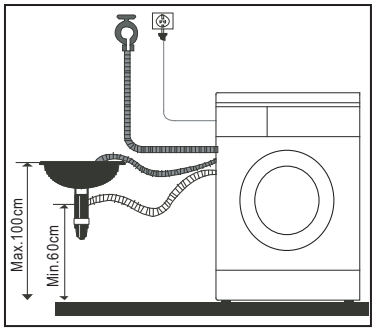

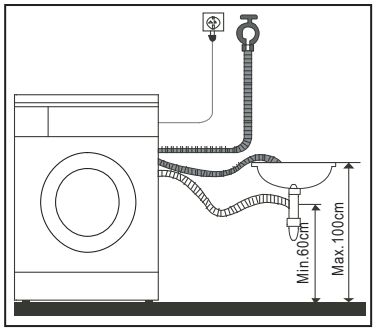

- It can drain the water up and down, outlet hose shall not be installed ata height beyond 100cm and its end shall not be immersed in water.

Position outlet hose properly so that the floor will not be damaged by water leakage.
Notes:
If the machine has outlet hose support, please install it like the following pictures.

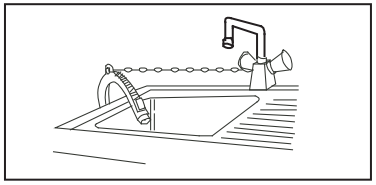

- When installing outlet hose, fix it properly with a rope.
- Position outlet hose properly so that the floor will not be damaged by water leakage.

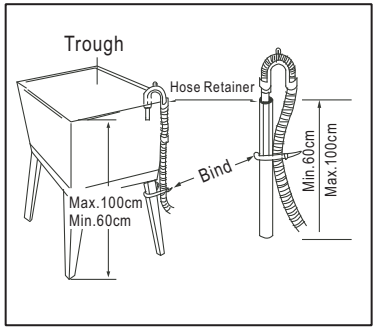

- If outlet hose is too long, do not force it into washing machine as it will cause abnormal noises.

Electrical Connection

- As the maximum current through the unit is 10A when you are using its heating function, please make sure the power supply system (current, power voltage and wire) at your home can meet the normal loading requirements of the electrical appliances.
- Please connect the power to a socket which is correctly installed and properly earthed.
- Make sure the power voltage at your place is same to that in the machine's rating label.
- Power plug must match the socket and cabinet must be properly and effectively earthed.
- Do not use multi-purpose plug or socket as extension cord.
- Do not connect and pull out plug with wet hand.
- When connecting and pulling out the plug, hold the plug tightly and then pull it out. Do not pull power cord forcibly.
- If power cord is damaged or has any sign of being broken, special power cord must be selected or purchased from its manufacturer or service center for replacement.

WARNING

1.**This machine must be earthed properly.** If there is any short circuit, earthing can reduce the danger of electrical shock.
This machine is equipped with power cord, which includes plug, earthing wire at earthing terminal.
2.Washing machine shall be operated in a circuit separate from other electrical appliances. Otherwise, power protector may be tripped or fuse may be burned out.

Operate Washing Machine

Checklist and Preparation before Washing Clothes

Please read this operation method carefully to avoid the troubles of washing machine and damages of clothes.

Check if the first-washed clothes will bed decolorized.
After a white towel touched with liquid detergent is used to wash the invisible corners of the clothes, check if the white towel is stained with clothes' original color.
As for the scarves and those clothes that easily get decolorized among imported clothes, please wash them separately before washing.
As for the stains on sleeves, collars and pockets, use the liquid detergent and wash it with brush gently. Finally put them into the washing machine to achieve more ideal washing effects.
As for temperature-sensitive clothes, they shall be washed as required in the labels. Otherwise, it may cause color change or distortion.

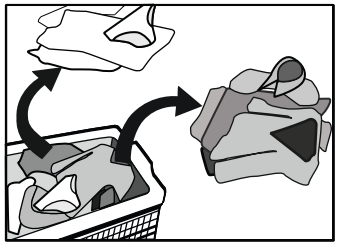

Keep in Mind:
Never put the clothes to be washed in washing machine for a long period of time. Otherwise it may get moldy and cause spots. Therefore, please wash the clothes in time. The clothes also may get color changed or distorted if they are not washed according to the stated washing temperature.

Clothes that can not be washed by washing machine
The clothes that may get distorted if being immersed in water:
Ties, waistcoats, western-style clothes, outer garments etc. may have obvious shrinkage if being immersed in water; the decolorized clothes such as blended spinning clothes of artificial fiber etc.

Wrinkle-style clothes, embossed clothes, resin clothes etc. may get distorted when being immersed in water. Among cotton and wool materials, the clothes that get easily distorted are wrinkle-style silk, fur products and fur decorations;
Clothes with decoration, long dress and traditional clothes etc are the products to get decolorized easily.
Please do not wash the clothes without material labels and washing requirements.
Never wash the clothes stained with the chemicals such as gasoline, petroleum, benzene, paint thinner and alcohol.

Please pay attention with regard to detergents
"Low bubble" detergent or washing powder or washing powder special for drum washing machine shall be selected according to fiber types (cotton, synthetic fiber, soft products and wool products), colors, washing temperatures, dirty degrees and types. Otherwise, excessive bubbles may be generated and overflowed out of the drawer so that accidents may take place.
Bleacher belongs to alkali type and can damage clothes, so it is suggested to use as little as possible.
Powder detergents can easily leave the residues in the clothes so as to generate the bad smell, so they shall be sufficiently rinsed.
Detergent can not easily get dissolved completely if there is too much detergent or water temperature is rather low. It can remain in clothes, pipes and washing machines to pollute the clothes.
Washing shall follow the weight of clothes, dirty degrees, local water hardness as well as the recommendations from the detergent manufacturers. Please consult the water company if you are not clear of water hardness.
Notes:
Keep detergents and additives in safe and dry places out of touch by kids.

Please take out the items out of the pockets.
Please check the pockets of the clothes to be washed, empty the rigid items such as decorations and coins, otherwise washing machine may be damaged or have abnormal troubles.

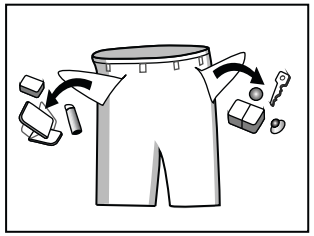

For the clothes to be washed, they are classified according to the following characteristics:
The symbol types of care labels: the clothes to be washed are classified into cotton, blended fiber, synthetic fiber, silk, wool and artificial fiber.

Color: white and colorful colors shall be identified. All new colorful articles shall be washed in a separate way.
Size: the articles of different sizes are washed together to increase the washing effects.
Sensitivity: soft articles shall be washed separately. As for new pure wool textiles, curtains and silks, the soft washing procedure shall be selected. Check the labels in all washing articles.
The clothes shall be sorted before being put into washing machine. As for the curtains with hooks, the hooks shall be removed before being washed.
The decorations on the clothes may damage the washing machine. As for the clothes with buttons or embroideries, they shall be turned over before being washed.
Clean up fasteners:
Zips shall be zipped close and buttons or hooks shall be fixed. The loose band or ribbon shall be bound together.

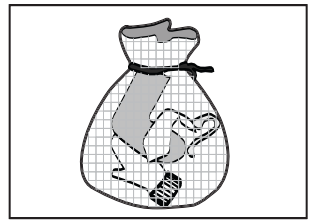

It is suggested to put bras into the pillowslip with zip or buttons sealed to prevent the steel wire from popping out of bras into the drum and damaging the machine.
Especially delicate textiles such as laced curtains, straightjackets, small articles (tight socks, handkerchiefs, ties etc.) shall be put into string bag for washing.

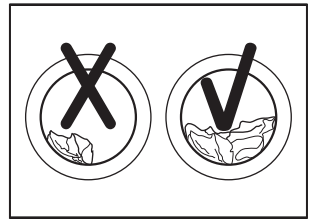

When washing a single big and heavy dress such as Turkish towels, jeans, wadded jackets etc., it may easily cause great eccentricity and give alarm due to great unbalance. Therefore it is suggested to add one or two more clothes to be washed together so that draining can be done smoothly.
Clean away dusts, stains and pet hairs from the clothes.
The clothes may be damaged and disturb washing effects during the friction between dusts, stains and clothes.
To protect baby skin
Baby articles (baby clothes and towels) including napkins shall be washed separately. If they are washed together with the adults' clothes, they may be infected. Rinsing times shall be increased to ensure the thorough rinsing and cleaning without the detergent residues.
It is suggested that the parts that are easily stained such as white sockets, collars and sleeves etc. shall be hand washed before being put into washing machine to achieve more ideal washing effects.
Please use powder or liquid detergents. The residues of the soap could remain in the gaps of the clothes if soap is used.

Confirm the washing capacity:
Do not put excessive washings; otherwise it may affect the washing effects. Please confirm the maximum affordable washing quantity according to the following table.

Fiber Type	Maximum Loading Capacity					
	6.0kg	7.0kg	8.0kg	9.0kg	10.0kg	12.0kg
Cotton	6.0kg	7.0kg	8.0kg	9.0kg	10.0kg	12.0kg
Synthetic	3.0kg	3.5kg	4.0kg	4.5kg	5.0kg	6.0kg
Wool	2.0kg	2.0kg	2.0kg	2.0kg	2.0kg	2.0kg
Delicate	2.5kg	2.5kg	2.5kg	2.5kg	2.5kg	2.5kg

The clothes which easily get fuzzed shall be turned over for washing
The clothes which easily get fuzzed shall be washed separately; otherwise the other articles can be stained with dust and thrum etc. Preferably, black clothes and cotton clothes shall be washed separately because they can easily get stained with the thrums of other colors when being washed together.
Please check before washing.

Washing machine shall not wash water-proof materials (ski suits, outside napkin pads, curtains).
As for the fiber products that water can not get soaked easily into such as water-proof cushions, and clothes, it is better not to wash. Otherwise there will be water bursting out or abnormal vibration to cause danger while rinsing and draining so that the clothes also may be damaged. (Such as outside napkin pads, raincoats, umbrella, ski suits, car covers, sleeping sacks etc.)

Cautions during Draining
Draining of normal clothes:
Moistures of washings are drained through drain hole.
Draining of water-proof clothes and fiber products:
In the normal washing and draining status, moistures of water-proof clothes and fiber products can not be drained while washing water is gathered in one direction so that the eccentricity of washing machine is too great and vibration or moving is caused.

Quick start

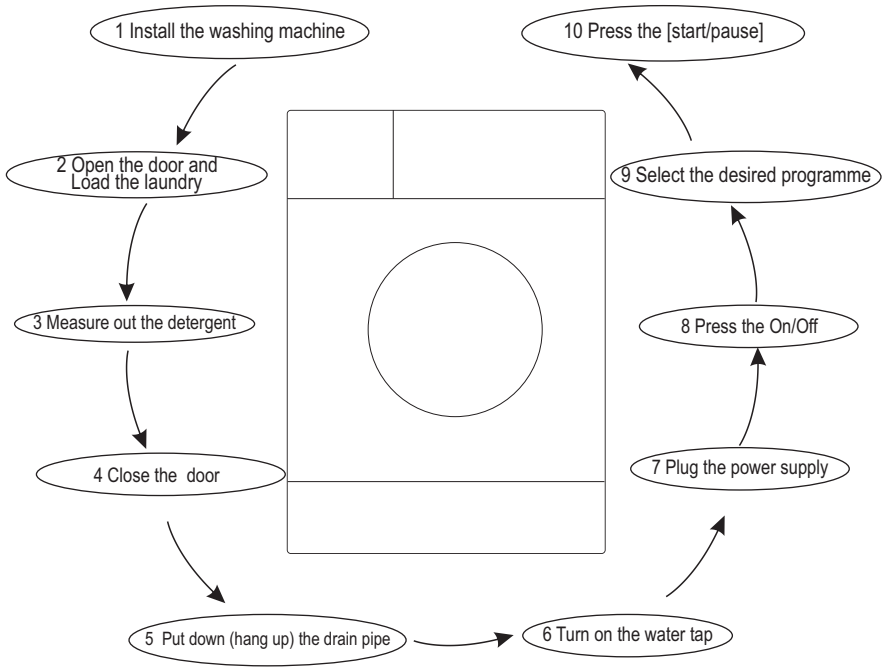

After washing notes:
1.After washing, the washing machine will make the sound;
2.Close the water tap;
3.Press the On/Off and pull out the power plug.

View of Control Panel

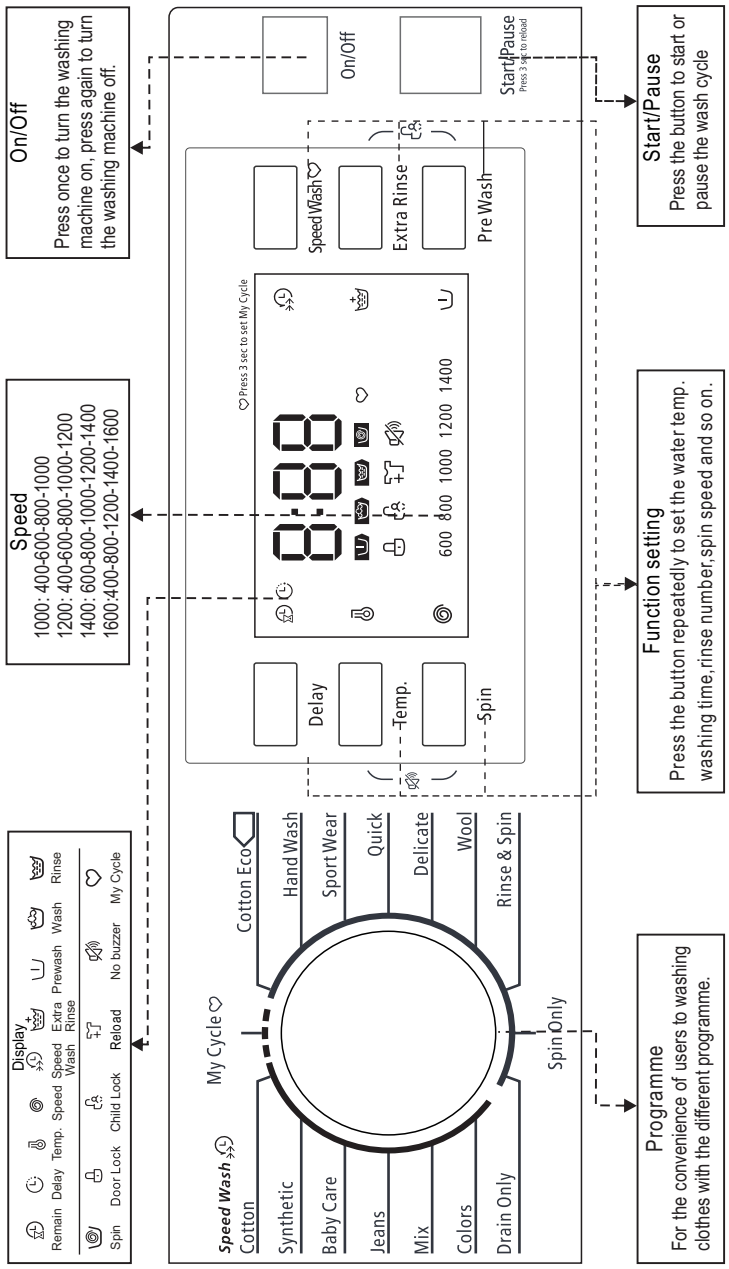

Notes:

1. The Control panel line chart is for reference only, Please refer to real product as standard.
2. The Control panel could be changed without written notice. Please visit the website of Washing Machine or call up the service line for consultation.
3. When the lights of Speed (600,800,1000,1200,1400) are off means the speed is 0.

Washing Clothes at first time

Before washing clothes at first time, the washing machine shall be operated in one round of the whole procedures without clothes in as follows:

1.Connect power source and water.
2.Put a little detergent into the box and close it.
3.Press the button “On/Off”.
4.Press the button “Start/Pause”.

The drawer is separated as follows:

I: Pre-detergent or washing powder.
II: Main detergent
❀ : Washing additive,such as fabric softener or tackifier.

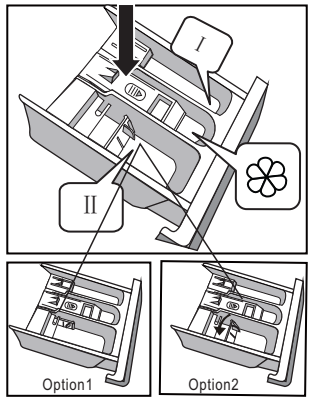

Put detergent into washing machine.

1.Pull out the drawer.
2.Fill pre-detergent into Case I (when necessary).
3.Fill detergent into Case II.
option1: detergent (powder) . option2(liquid)
4.Fill softener into Case ❀ (when necessary).

Notes:

- As for the agglomerated or ropy detergent or additive, before they are poured into the detergent box, it is suggested to use some water for dilution to prevent the inlet of detergent box from being blocked and overflowing while filling water.
- Please choose suitable type of detergent for the various washing temperature to get the best washing effect with less water and energy consumption.

Start up washing machine

Connect the power. Check if water pipes are connected properly. Open the tap completely. Put in the clothes to be washed and fill in the detergent and tackifier. Then press the button “On/Off”,Select the proper procedures and functions and press the button “Start/Pause”.

Select the procedure

The proper washing procedures shall be selected according to the types, quantities, and dirtiness of the clothes to be washed in combination with the following washing temperature table.

90 ℃	Seriously besmirched, pure white cotton or flax (for example: coffee table cloths, canteen table cloths, towels, bed sheets)
60 ℃	Moderately besmirched, colorful flax, cotton and synthetic articles with certain decolorizing degree (for example: shirts, night pajamas; Slightly besmirched, pure white flax
40 ℃,30 ℃, 20 ℃, Cold water	Normally besmirched articles (for example: synthetic and wool)

First, turn the rotary switch to select the corresponding procedures according to the types of textiles.

Second, select the proper temperature according to the dirtiness. Generally, the higher the temperature is, the more the power is consumed.

Last, select the proper revolution speed. The higher the revolution speed is, the drier the textiles are spun, but higher the noises will also be increased.
The surfaces of delicate textiles will have wrinkles and the working life of washing machine will be shortened.

PLEASE NOTE: to protect the clothes, the lower revolution speed shall be selected for delicate textiles.

The main washing procedures depend on the types of the clothes to be washed as follows:

- Cotton

You can select this procedure to wash the daily washable clothes. The washing period is quite long with quite strong washing intension. It is recommended to wash the daily cotton articles, for example: bed sheets, quilt covers, pillowcases, gowns, underwear etc.

- Cotton ECO

To increase the washing effects, main additional washing time is increased.
It is recommended to wash the clothes for babies or worn by the persons with allergic skin.

- Synthetic

You can select this procedure to wash the quite delicate clothes. The procedure is shorter compared with that for cottons and the washing intension is quite gentle. It is recommended to wash synthetic articles, for example: shirts, coats, blending. As for curtains and laced textiles, the procedure “Synthetic ” shall be selected. While washing the knitting textiles, detergent quantity shall be reduced due to its loose string construction and easily forming bubbles.

- Baby Care

You can select this procedure to wash your baby’s clothes, it can make the baby's wear cleaner and make the rinse performance better to protect the baby skin.

- Jeans

This program is specially designed for washing jeans.

- Mix

You can select this procedure wash the tough clothes, that need much more time and strength. It is used for the daily clothes fo cotton, such as sheets, chained, pillowcases bathrobe and underwear.

- Colors

You can choose the program washing brightly colored clothing, it can protect the bright colors better .

- Drain Only

Separate Drain only Procedure.

- Spin Only

Separate spin only procedure. Soap water or rinse water shall be drained out before spinning.

- Rinse&Spin

Separate Rinse&Spin Procedure.

- Wool

You can select this procedure to wash the wool textiles labeled with “Machine Wash”. Please select the proper washing temperature according to the label on the articles to be washed. Furthermore, the proper detergent shall be selected for wool textiles.

- Delicate

You can select this procedure to wash your delicate clothes. Its washing intension is gentler and revolution speed is less compared with the procedure “Synthetic”. It is recommended for the articles to be washed softly.

- Quick

This procedure is suitable for washing few and not very dirty clothes quickly.

- Sport Wear

You can select this procedure to wash the activewear.

- Hand Wash

As for few light dirty clothes, the default temperature of washing is cold.

- My Cycle

Press Speed Wash 3sec. for my cycle to memory the procedure. The default my cycle is cotton.

The main function can be selected as follows:

- Prewash

The Prewash function can get an extra wash before main wash.

- Speed Wash

The function can decrease the washing time.

- Extra Rinse

The laundry will undergo extra rinse once after you select it.

- Delay

Delay function can be set with this button, the delaying time is 0-24 H.

Set the Delay function:

1. Select a programme;
2.Press the Delay button to choose the time;
3.Press Start/Pause to commence the delay operation.

Cancel the Delay function: Press the Delay button until the display will be 0H.It should be pressed before starting the program. If the program already started, should press the On/Off button.

Notes: If there is any break in the power supply while the machine is operating, a special memory stores the selected programme and when the power is restarted, press the Start/Pause button the left time is continues.

- Reload

This operation can be executed during the washing procedure. When the drum of the washing machine is still rolling and there is large amount of water with high temperature in the drum. The state is unsafe and the door cannot be opened forcefully. To press “Start/Pause” for 3 sec. to reload, and start the clothes adding in the midway function .
Please follow the steps as bellow:

1.Wait until the drum stops rotation.
2.The door lock is unlocked.
3.Close the door when the clothes needs are loaded and repress the《Start/Pause》button.

- Child Lock

To avoid that the washing procedure cannot operate normally due to the mis operation by kids during the washing procedure, you can select this function, In this case, the other buttons except On/Off button can not work, at this state ,the machine power off when press the key on/off. The machine remembers the program child lock and the program during powered off when press the key on/off again.

Press Extra Rinse and Pre Wash together 3 seconds during the running procedure, the buzzer will beep ,Start/Pause button as well as the rotary switch are locked. Press the two buttons for 3 seconds together and buzzer will beep to release to locking. But cut off the power supply , the kid's protection is also release to locking. The kid's protection will not be cancelled after all procedures are completed.

- Suppression of the acoustic signals

This is an additional buzzer function on your appliance. After deactivating the buzzer function, the buzzer will be closed.

After starting the machine, press the "Temp.&Spin" button for 3 seconds and you will hear a beep, then the buzzer will be closed. To restart the buzzer function, press the "Temp.&Spin" button again for 3 seconds. The setting will be kept until the next reset.

Warning: After deactivating the buzzer function, the sounds will not be activated any more.

- Bubble Removal Function

Bubble Check Function: Redundant bubbles will occur when there is excessive detergent, which will affect wash and rinse effects. The procedure will check automatically and one bubble removal procedure will be added automatically to remove bubbles when excessive bubbles are checked.

Table of Washing Procedures

Procedure / Description	Load(kg)			Detergent Box			Delay	Speed wash	Extra rinse	Prewash	Default Temp.(℃)	Default Time (H)						Default Speed(RPM)		
													6.0kg		7.0/8.0kg					
	6.0	7.0	8.0	Case I	Case II	Softener Case						1000	1200	1400	1200	1400	1000	1200	1400
Cotton	6.0	7.0	8.0	○	●	○	○	○	○	○	40	2:40	2:40	2:40	2:40	2:40	800	800	800
Synthetic	3.0	3.5	4.0	○	●	○	○	○	○	○	40	1:40	1:40	1:40	1:40	1:40	800	800	800
Baby Care	6.0	7.0	8.0	○	●	○	○	○	○	○	30	1:20	1:20	1:20	1:20	1:20	800	800	800
Jeans	6.0	7.0	8.0	○	●	○	○	○	○	○	60	1:45	1:45	1:45	1:45	1:45	800	800	800
Mix	6.0	7.0	8.0	○	●	○	○	○	○	○	40	1:13	1:13	1:13	1:13	1:13	800	800	800
Colors	3.0	3.5	4.0	×	●	○	○	○	○	×	Cold	1:10	1:10	1:10	1:10	1:10	800	1000	1000
Drain Only	–	–	–	×	×	×	○	×	×	×	–	0:01	0:01	0:01	0:01	0:01	–	–	–
Spin Only	6.0	7.0	8.0	×	×	×	○	×	×	×	–	0:12	0:12	0:12	0:12	0:12	800	800	1000
Rinse&Spin	6.0	7.0	8.0	×	×	○	○	×	○	×	–	0:20	0:20	0:20	0:20	0:20	800	800	1000
Wool	2.0	2.0	2.0	×	●	○	○	×	○	×	40	1:07	1:07	1:07	1:07	1:07	600	600	600
Delicate	2.5	2.5	2.5	×	●	○	○	×	○	×	30	0:50	0:50	0:50	0:50	0:50	600	600	600
Quick	2.0	2.0	2.0	×	●	○	○	×	×	×	Cold	0:15	0:15	0:15	0:15	0:15	800	800	800
Sport Wear	3.0	3.5	4.0	○	●	○	○	×	○	○	40	0:45	0:45	0:45	0:45	0:45	1000	1200	1200
Hand Wash	2.0	2.0	2.0	○	●	○	○	×	○	○	Cold	1:00	1:00	1:00	1:00	1:00	600	600	600
Cotton ECO	6.0	7.0	8.0	×	●	○	○	×	×	×	60	2:51	3:04	2:51	3:06	2:53	1000	1200	1400

The energy class is A+++ Energy test program: Cotton ECO 60/40℃, **Speed: the highest speed; Other as the default.**
Half load for 6.0/7.0/8.0Kg machine:3.0/3.5/4.0Kg.
"Cotton ECO 60/40℃" are the "standard Cotton 60/40℃" programme and the standard washing programs to which the information in the label and the fiche relates, and they are suitable to clean normally soiled cotton laundry and that they are the most efficient programmes in terms of combined energy and water consumptions for washing that type of cotton laundry,that the actual water temperature may differ from the declared cycle temperature.

● Means must ○ Means optional × Means not necessary

Notes: The parameters in this table are only for user's reference. The actual parameters maybe different with the parameters in above mentioned table.

Before your maintenance starts, please do pull out the power plug or disconnect power and close the tap.

⚠ WARNING

- Solvents are forbidden to avoid that the washing machine is damaged, and toxic gases are generated or exploded.
- Never use water to sprinkle and wash the washing machine.
- It is forbidden that the detergents containing PCMX are used to clean the washing machine.

■ Cleaning and Maintenance of Washing Machine Cabinet

Proper maintenance on the washing machine can extend its working life. The surface can be cleaned with diluted non-abrasive neutral detergents when necessary. If there is any water overflow, use the wet cloth to wipe it off immediately. No sharp items are allowed to strike the cabinet.

Notes: formic acid and its diluted solvents or equivalent are forbidden.

■ Clean Internal Drum

The rusts left inside the drum by the metal articles shall be removed immediately with chlorine-free detergents.

Never use steel wool.

■ Dispose a Frozen Washing Machine

When the temperature drops below zero and your washing machine gets frozen, you may:

1.Disconnect the power supply for the washing machine.
2.Wash the tap with warm water to loosen inlet pipe.
3.Take down inlet pipe and immerse it in warm water.
4.Pour warm water into washing drum and wait for 10 minutes.
5.Reconnect inlet pipe to the tap and check whether inlet and outlet are working normally.

Notes: when the washing machine is reused, make sure the ambient temperature is above 0℃

■ Anti-freeze

If your washing machine is located in the room where it can get frozen easily, please drain the remaining water inside drain pipe and inlet pipe thoroughly.

Remove the remaining water in inlet pipe:

1.Close the tap.
2.Screw off the inlet pipe from tap and put its end into the container.
3.Start up any procedure except single Wash or Drain procedure. Water will be drained out of inlet pipe if any for about 40 seconds.
4.Reconnect the inlet pipe to tap.

Remove the remaining water in drain pump

⚠ WARNING

To avoid burning, it shall be done after the hot water inside the machine cools down.

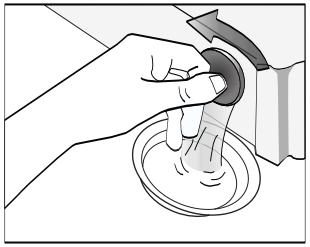

■ Clean detergent box and grooves

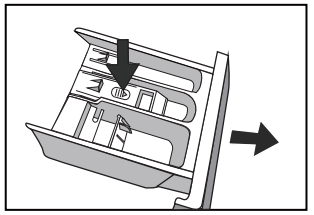

Clean detergent drawer and grooves

1.Press down the arrow location on softener cover inside the drawer.
2.Lift the clip up and take out softener cover and wash all grooves with water.
3.Restore the softener cover and push the drawer into position.

■ Clean inlet filter

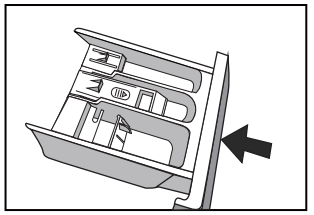

Inlet filter shall must be cleaned if there is not any or insufficient water in when the tap is opened.

Clean the tap filter:

1.Close the tap.
2.Select any procedure except “Wash” or “Drain” procedure.
3.Press the button “Start/Pause” and keep the procedure running for about 40 seconds.
4.Remove the inlet pipe from the tap.
5.Use water to wash the filter.
6.Reconnect the inlet pipe.

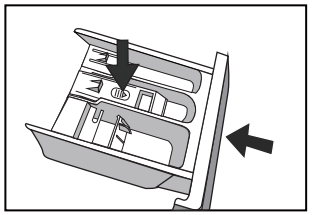

Washing the filter in washing machine:

1.Screw off the inlet pipe from the backside of the machine.
2.Pull out the filter with long nose pliers and reinstall it back after being washed.
3.Reconnect the inlet pipe.
4.Open the tap and make sure there is no water leakage.
5.Close the tap.

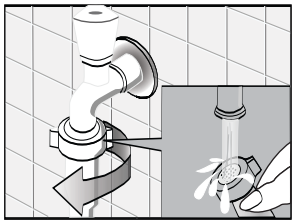

Notes: Generally, the tap filter is washed first and then the filter in washing machine will be washed. If only the filter in washing machine is washed, then the steps 1~3 in cleaning the tap filter shall be repeated.

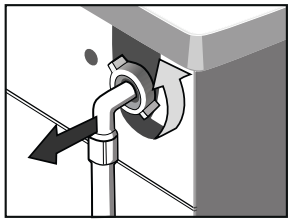

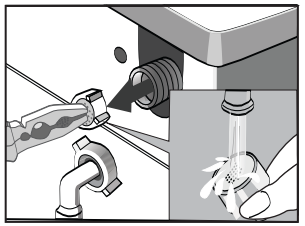

Maintenance

WARNING

Pull out the power plug to avoid electrical shock before washing.
After using the washing machine, pull out the power cord and close the door tightly to avoid pinching the kids.

■ **Remove foreign matters**

Drain Pump Filter:

Drain pump filter can filter the yarns and small foreign matters from the washings.
Clean the filter periodically to ensure the normal operation of washing machine.

WARNING

According to the soil level within the cycles and the frequency of the cycles, you have to inspect and clean the filter regularly.
The pump should be inspected if the machine does not empty and/or spin;
The machine makes an unusual noise during draining due to objects such as safety pins, coins etc. blocking the pump.
The Service_panel proceed as follows:

1.After the power is dis-connected, use hand to open the filter cover.

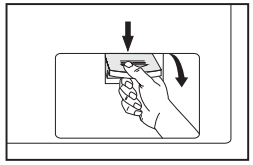

2.Turn the filter down as shown with the figure and take out sundries matters.

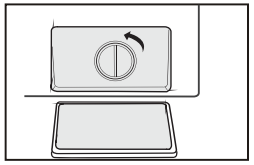

3.Reinstall each part back after sundries matters are removed.

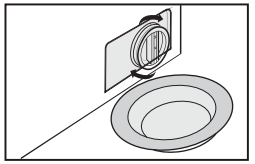

Warning!
When the appliance is in use and depending on the programme selected there can be hot water in the pump. Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When replacing the cover, ensure it is securely retight end so.

Troubleshooting

Troubles	Reason	Solution
Washing machine cannot start up		Check if the door is closed tightly. Check if power plug is inserted well. Check if water supply tap is opened. Check if button “Start/Pause” is pressed. Check if button “On/Off” is pressed.
Door cannot be opened	Machine's safety protection design is working.	Disconnect the power.
Heating fault	NTC is damaged and heating pipe is aging.	Can normally wash the clothes. Only cannot wash with heating. Shall contact the service center promptly.
Water leakage	The connection between inlet pipe or outlet hose and tap or washing machine is not tight. Drain pipe in the room is blocked.	Check and fasten water pipes. Clean up outlet hose and ask a specialized person to repair it when necessary.
Water is overflowed from the bottom of the machine	The inlet pipe is not connected firmly. Outlet hose has water leakage.	Fix the inlet pipe. Replace the drain hose.
Indicator or display does not light.	Power is disconnected. PC board has problems. Harness has connection problem.	Check if the power is shut down and power plug is connected correctly. If not, please call up service line.
Detergent residues in the box	Washing powder is dampened and agglomerated.	Clean and wipe the box. Use liquid detergents or the detergents special for drum.
Washing effects are not good	The clothes are too dirty. Insufficient detergent quantity.	Select a proper procedure. Add the proper detergent quantity according to the instructions in detergent package.
Abnormal noise Great vibration		Check if the fixing (bolts) has been removed. If cabinet is installed on the solid and level floor. Check if there are any barrettes or metal articles inside. Check if the legs in the washing machine are adjusted level.

Remove the problems

Display LED	Description	Reason	Solution
E30	Door lock problem	Door is not closed properly.	Restart after the door is closed.
		Please call up service line if there are still troubles.	
E10	Water injecting problem while washing	Tap is not opened or water flows too slowly. Inlet valve filter is blocked. Inlet pipe is twisted. If water is not supplied	Open the tap or wait till the water supply becomes normal. Check inlet valve filter. Straighten the water pipe Check the other taps in the room.
		Please call up service line if there are still troubles.	
E21	Drain problem while washing	Outlet hose is blocked or twisted Drain pump is blocked	Wash and straighten outlet hose. Wash drain pump filter
		Please call up service line if there are still troubles.	
Please call up the service line if there is any other problem.			

Appendix

Care Lable

The label and sign on the fabric can help you to choose the best way to launder your clothes.

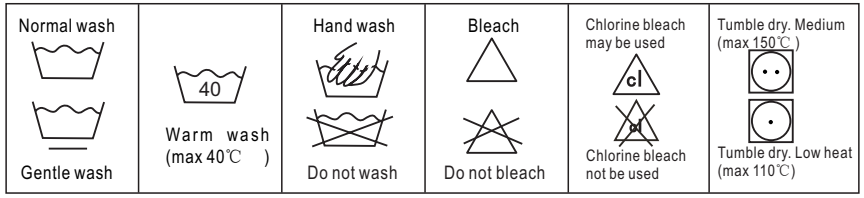

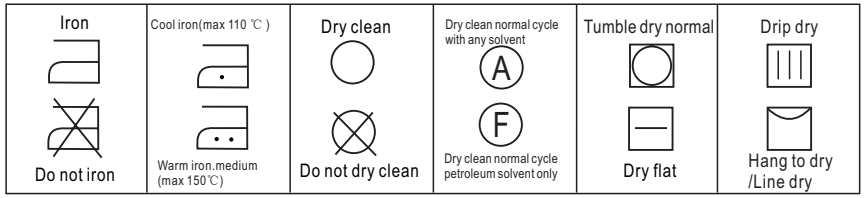

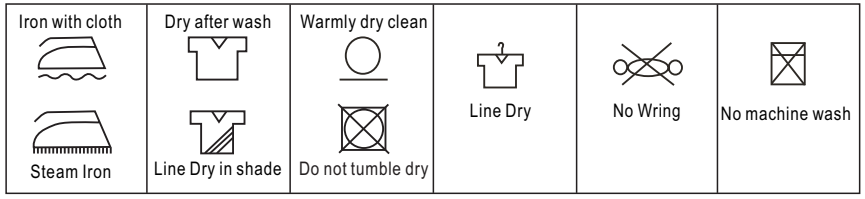

Electrical Warning

To avoid fire,electrical shock and other accidents,please remember the following reminding:

- Only the voltage indicated in power label can be used. If you are not clear of the voltage at home, please contact the local power bureau.
- When you are using the heating function, the maximum current through the washing machine will reach 10A. Therefore, please make sure the power supply units (current, voltage and cable) can meet the normal load requirements for the machine.
- Protect the power cord properly. Power cord shall be fixed well so that it will not trip the people or other things and be damaged. Special attention shall be paid to the socket. It shall be plugged into the sockets easily and attention shall be paid to the plug location.
- Do not make the wall-mounted socket overloaded or cable extended. Overloading of the wiring may cause fire or electrical shock. Do not pull out power plug with wet hand.
- To ensure your safety, power plug shall be inserted into an earthed three-pole socket. Carefully check and ensure that your socket is properly and reliably earthed.

Product Specifications

Parameter				
Washing Capacity	6.0kg	7.0kg	8.0kg	9.0kg
Dimension(W*D*H)	595*470*850	595*495*850	595*565*850	595*565*850
Net Weight	54kg	61kg	70kg	71kg
Rated Power	2000W	2050W	2000W	2000W
Power Supply	220-240V~,50Hz	220-240V~,50Hz	220-240V~,50Hz	220-240V~,50Hz
MAX.Current	10A	10A	10A	10A
Standard Water Pressure	0.05MPa~1MPa	0.05MPa~1MPa	0.05MPa~1MPa	0.05MPa~1MPa

Parameter		
Washing Capacity	10.0kg	12kg
Dimension(W*D*H)	595*565*850	595*585*850
Net Weight	72kg	73kg
Rated Power	1950W	2000W
Power Supply	220-240V~,50Hz	220-240V~,50Hz
MAX.Current	10A	10A
Standard Water Pressure	0.05MPa~1MPa	0.05MPa~1MPa

Product Fiches

Brand:Malloca
Model:MWM-C1903E

Rated capacity:8kg
Energy efficiency class:A+++
EU Ecolabel:N/A

Energy consumption 196kwh per year, based on 220 standard washing cycles for cotton ECO at 60°C/40°C at full and partial load, and the consumption of the low-power modes.Actual energy consumption will depend on how the appliance is used. Water consumption 11000 litres per year, based on 220 standard washing cycles for cotton ECO 60°C /40°C at full and partial load. Actual water consumption will depend on how the appliance is used.

Spin-drying efficiency class B/B on a scale from G (least efficient) to A (most efficient)
Maximum spin speed:1200/1400rpm
Consumption values(1200rpm):

Standard Programme	Load	Energy consumption	Water consumption	Remaining moisture content	Programme duration
Cotton ECO 60°C	8kg	1.05kwh	55L	51%	179min
Cotton ECO 60°C	4kg	0.84kwh	45L	54%	179min
Cotton ECO 40°C	4kg	0.63kwh	45L	54%	179min

Consumption values(1400rpm):

Standard Programme	Load	Energy consumption	Water consumption	Remaining moisture content	Programme duration
Cotton ECO 60°C	8kg	1.05kwh	55L	51%	179min
Cotton ECO 60°C	4kg	0.84kwh	45L	54%	179min
Cotton ECO 40°C	4kg	0.63kwh	45L	54%	179min

Notes:
1. Programme setting for testing in accordance with applicable standard EN60456-2011.
2. When using the test programmes, wash the specified load using the maximum spin speed.
3. The actual parameters will depend on how the applicance is used,and maybe different with the parameters in above mentioned table.

Off mode power consumption:0.5W
Left-on mode power consumption:1W
The household washing machine is equipped with power management system.
The duration of the left-on mode time is less than 1 minute.

Airborne acoustical noise (washing):59
Airborne acoustical noise (spinning):76/78
Notes: The airborne acoustical noise emissions during washing/spinning for the cotton ECO 60℃ programme at full load.

Nội Dung

Thông tin về an toàn 31
Sơ lược về máy giặt 34
Cài đặt máy giặt 36
Cách sử dụng máy giặt 40
Những việc cần chuẩn bị và kiểm tra trước khi giặt..... 40
Bảng điều khiển 44
Chọn chương trình giặt 45
Bảng liệt kê các chương trình giặt 49
Bảo trì 50
Bảo trì và vệ sinh 50
Sự cố thường gặp 53
Khắc phục vấn đề 54
Phụ Lục 55
Các biểu tượng giặt..... 55
Thông số kỹ thuật 56
Thông số 57

Thông tin về an toàn

■ Thông tin về an toàn

- Di chuyển thiết bị cẩn thận. Không cầm những phần nhô ra ở máy. Không được dùng cửa của máy sấy để di chuyển thiết bị. Chỉ nghiêng máy tối đa 30^0 trong trường hợp không thể di chuyển máy theo chiều thẳng đứng.
- Nếu dây điện bị hỏng, hãy liên hệ nhà sản xuất, công ty dịch vụ hoặc những thợ điện có chuyên môn để tránh nguy hiểm trong quá trình thay thế.
- Hãy sử dụng bộ ống dẫn nước được đính kèm với sản phẩm, không dùng những ống nước cũ.
- Máy giặt gia dụng chỉ sử dụng trong nhà.
- Không đặt thiết bị trên mặt sàn trải thảm hoặc chiếu bởi nó có thể làm giảm khả năng lưu thông khí ở đáy của máy.
- (Lưu ý dành cho thị trường châu Âu) trẻ em trên 8 tuổi. những người bị suy giảm các chức năng về thể chất, trí tuệ hay giác quan, hoặc những đối tượng không có kinh nghiệm và sự hiểu biết về sản phẩm *có thể* sử dụng thiết bị nếu người dùng được chỉ dẫn cách sử dụng bởi một người chịu trách nhiệm về sự an toàn của họ. Quá trình lau chùi và bảo dưỡng máy không nên được thực hiện bởi trẻ nhỏ nếu không có sự giám sát.
- (Lưu ý dành cho thị trường châu Âu) sản phẩm không nhằm phục vụ đối tượng (bao gồm trẻ em) suy giảm các chức năng về thể chất, trí tuệ hay giác quan, hoặc những đối tượng không có kinh nghiệm và sự hiểu biết về sản phẩm, trừ khi người dùng được chỉ dẫn cách sử dụng bởi một người chịu trách nhiệm về sự an toàn của họ. Quá trình lau chùi và bảo dưỡng máy không nên được thực hiện bởi trẻ nhỏ nếu không có sự giám sát.
- Rút dây điện ra trước khi bảo trì hoặc lau chùi.
- Loại bỏ hết các vật dụng trong túi quần, túi áo trước khi giặt.

- Kiểm tra máy trước khi cho quần áo vào để đề phòng trẻ em hoặc thú nuôi leo vào trong.
- Bất kỳ đồ vật nào như đồng xu, ghim, đinh, ốc vít hoặc những vật sắc nhọn đều có thể làm hư máy.
- Luôn rút phích cắm của thiết bị và tắt nguồn nước sau khi sử dụng.
- Trước khi mở cửa máy giặt, hãy kiểm tra xem bên trong đã xả hết
  nước chưa. Không được mở máy nếu vẫn còn nước.
- Cửa kính máy giặt có thể bị nóng trong quá trình sử dụng, vì vậy không được để trẻ em và thú nuôi ở gần máy.
- Nguồn điện trong nhà phải phù hợp với thông số kỹ thuật của máy giặt.
- Không sử dụng nguồn điện thấp hơn yêu cầu về điện của máy giặt. Không rút phích cắm khi tay ướt.
- Để đảm bảo an toàn, cần phải nối đất thiết bị với 3 cực, kiểm tra lại để chắc chắn máy đã được nối đất cẩn thận.
- Không để trẻ dưới 3 tuổi lại gần thiết bị trừ khi có sự giám sát thường xuyên.
- Không để trẻ em ngịch thiết bị.
- Để bao bì sản phẩm (túi nhựa, miếng xốp…) xa tầm tay trẻ em.
- Không để máy giặt trong nhà tắm, những nơi ẩm ướt hoặc trong phòng có khí ga, chất nổ.
- Hệ thống nước và điện phải tuân theo hướng dẫn, nguyên tắc an toàn của nhà sàn xuất và được lắp đặt bởi nhà sản xuất, công ty dịch vụ hoặc những thợ điện có chuyên môn để tránh nguy hiểm.
- Gỡ bỏ hết bao bì đóng gói, chốt bảo vệ khi vận chuyển trước khi sử dụng máy. Nếu không, máy sẽ bị hư hỏng nặng.
- Máy giặt chỉ có 1 van cấp nước thì phải được nối vào nguồn nước lạnh. Nếu máy giặt có 2 van cấp nước thì có thể nối 1 van vào vòi nước lạnh, 1 van vào vòi nước nóng.

- Thiết bị của bạn là máy giặt gia dụng nên chỉ được thiết kế để giặt những loại vải phù hợp với máy.
- Tuyệt đối không sử dụng các dung môi độc hại, gây cháy, nổ trong máy. Không dùng xăng, cồn làm chất tẩy quần áo. Chỉ sử dụng bột giặt và nước xả vải phù hợp với lồng giặt.
- Không giặt thảm lót sàn.
- Lưu ý đến giai đoạn máy giặt xả nước nóng để tránh bị bỏng.
- Không được tự ý châm nước khi máy đang giặt.
- Khi máy báo hiệu giặt xong, đợi khoảng 2 phút rồi mới mở cửa.
- Tắt điện và nước ngay sau khi máy giặt xong.
- Không ngồi trên nóc máy giặt.
- Không tựa vào cửa máy giặt.
- Không đóng cửa mạnh tay. Nếu thấy cửa khó đóng, kiểm tra bên trong xem quần áo đã được dàn trải đều chưa, lượng quần áo có quá nhiều không.
- Máy giặt gia dụng không được gắn âm tường.
- Cẩn thận khi lắp đặt máy
- Để những người có chuyên môn tháo chốt bảo vệ.
  1. Rút hết nước bị tích lũy trong máy ra.
  2. Di chuyển thiết bị cẩn thận. Không cầm những phần nhô ra ở máy. Không được dùng cửa của máy giặt để di chuyển thiết bị.

Thông tin về an toàn

Lưu ý khi tiêu hủy sản phẩm:
Ký hiệu bên biểu thị rằng thiết bị đã qua sử dụng sẽ không được để lẫn với những vật thải khác. Để bảo vệ môi trường và sức khỏe con người từ việc xử lý rác thải bừa bãi, xin hãy lưu ý đến việc tái chế đúng cách để thúc đẩy việc tái sử dụng hiệu quả các nguồn nguyên liệu này. Nếu bạn muốn trả lại thiết bị đã qua sử dụng, hãy liên hệ với nơi cung cấp sản phẩm hoặc hệ thống thu mua vật liệu để họ có thể tái chế một cách an toàn cho môi trường.

Sơ lược về máy giặt

■Thành phần

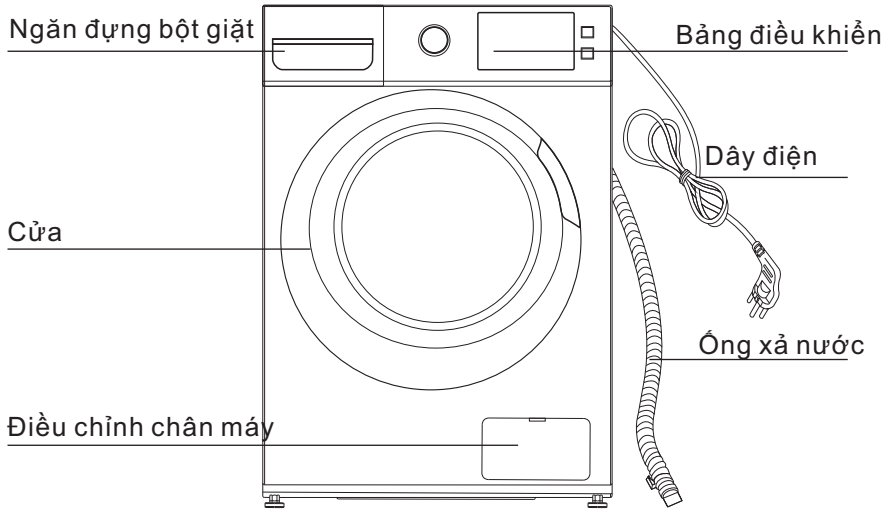

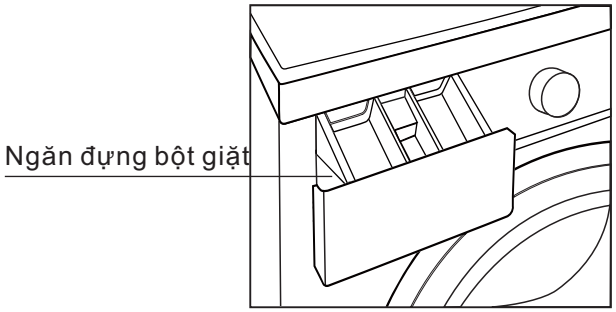

■ Phụ kiện

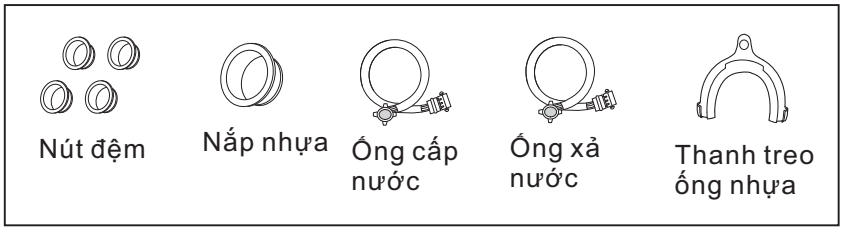

Mở gói thiết bị

Mở gói thiết bị và kiểm tra xem có bị hư hỏng không. Hãy đảm bảo mọi bộ phận, linh kiện của máy đều đầy đủ. Nếu máy bị hư hỏng trong quá trình vận chuyển hoặc có bộ phận, linh kiện nào bị thiếu, liên hệ ngay nhà cung cấp thiết bị.

Loại bỏ bao bì đóng gói

Những bao bì đóng gói này nguy hiểm đối với trẻ em. Hãy tiêu hủy bao bì đúng cách và để tránh xa tầm tay của trẻ. Không vứt bao bì đóng gói chung với rác thải gia đình.

Tháo chốt bảo vệ

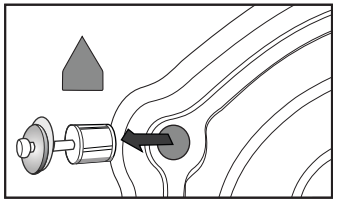

Phải tháo chốt bảo vệ ở mặt sau của máy trước khi sử dụng. Làm theo các bước sau để tháo chốt:

1. Nới lỏng rồi tháo các chốt bằng cờ-lê.
2. Gắn nút đệm vào chỗ chốt vừa tháo.
3. Giữ lại chốt bảo vệ phòng trường hợp cần dùng sau này.

Chọn nơi đặt máy

Nơi đặt máy cần thỏa mãn những tiêu chí sau:

- Nơi để máy phải chắc chắn, khô ráo, bằng phẳng (nếu sàn không bằng phẳng thì hãy điều chỉnh chân máy như hình dưới)
- Tránh ánh nắng chiếu trực tiếp vào máy.
- Phòng phải thông thoáng.
- Nhiệt độ phòng không được dưới 0^0C
- Đặt máy tránh xa các nguồn nhiệt như than, ga. Tránh để máy đè lên dây điện. Không để thảm dưới chân máy.

Điều chỉnh chân máy

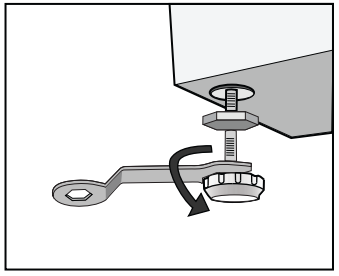

1. Trước khi để máy giặt xuống sàn, hãy kiểm tra xem chân máy đã được gắn chặt vào thân máy chưa. Nếu chưa, vặn chặt tất cả chân máy bằng cờ-lê.
2. Sau khi đặt thiết bị cố định một chỗ, lắc thử máy xem có bị lung lay không. Nếu máy chưa đứng vững, điều chỉnh lại chân máy.

3. Giữ yên máy ở vị trí mong muốn, nới lỏng đai ốc và xoay chân máy giặt sao cho gần chạm mặt đất. Dùng một tay giữ chặt chân máy, tay kia siết chặt lại đai ốc.
4. Kiểm tra lại 4 góc máy xem còn lung lay không. Nếu còn, lặp lại bước 2 và 3.
5. Để một vật hình trụ như lon nước ngọt trên máy giặt theo hướng thẳng đứng, nằm nghiêng. Lon nước nằm yên tức là máy đã ở vị trí cân bằng. Lon nước lăn qua một bên nghĩa là máy chưa cân đối. Lon nước lăn về hướng nào nghĩa là phía máy giặt bên đó bị thấp. Để khắc phục, bạn cần nâng kéo dài cả hai chân ở bên phía máy bị nghiêng (làm theo bước 1, 2, 3).

Nối ống cáp nước

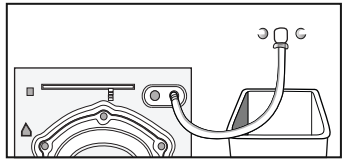

Nối ống cấp nước như hình bên. Đối với những mẫu máy có van nước nóng, hãy nối nguồn cấp nước nóng vào van này để giảm lượng điện tiêu thụ cho một số chương trình giặt.

Cài đặt ống cấp nước

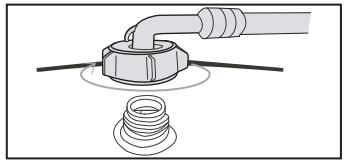

1. Nối khuỷu ống vào vòi nước, vặn chặt theo chiều kim đồng hồ.
2. Nối ống vào van ở mặt sau của máy và vặn ống theo chiều kim đồng hồ.

Ghi chú: kiểm tra xem nước có bị rỉ ra sau khi lắp không, nếu có thì lặp lại bước nối ống ở trên. Nếu vòi nước có hình vuông hoặc quá to, nên thay vòi nước cho phù hợp với ống.

Lỗ đặt ống

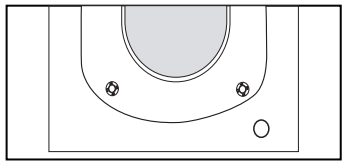

Lỗ này giúp cố định ống nước ở phía sau của máy.

Đặt ống thoát nước

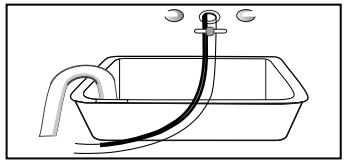

Có hai cách đặt ống thoát nước:

1.Đặt ống bên cạnh bồn nước

2.Nối ống nước từ máy giặt vào ống nước của bồn.

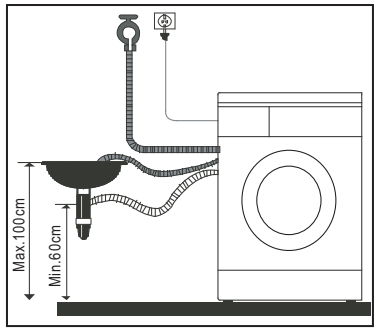

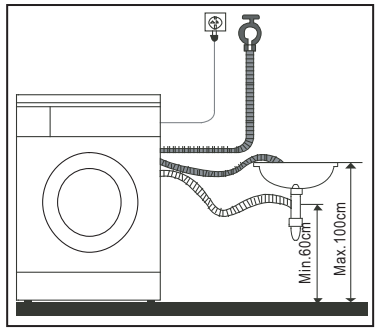

Đặt ống thoát nước ngay ngắn để không bị rò rỉ nước ra sàn nhà. Nếu thiết bị có kèm theo linh kiện cố định ống nước, hãy sử dụng các linh kiện theo hình sau.

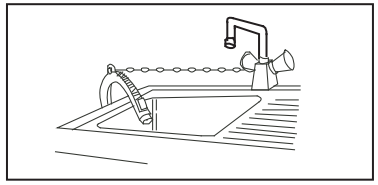

- Cố định ống thoát nước bằng một sợi dây

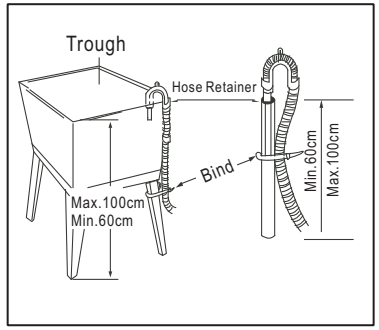

- Không được ép dồn ống vào máy giặt trong trường hợp ống thoát nước quá dài. Điều này sẽ gây ra tiếng ồn trong ống khi máy xả nước.

Nối điện

- Dòng điện tối đa chạy qua máy khi sử dụng chức năng sấy là 10A. Hãy đảm bảo hệ thống cung cấp điện ở nhà bạn (dòng điện, điện áp, dây điện) thỏa mãn yêu cầu của máy.
- Chỉ sử dụng ổ cắm đã được cài đặt và nối đất cẩn thận. Phích cắm phải vừa vặn với ổ cắm.
- Điện áp nguồn phải bằng điện áp mà máy giặt yêu cầu.
- Không sử dụng ổ cắm đa dụng hoặc ổ cắm có bộ dây nối dài.
- Khi cắm, rút phích điện: cầm chắc vào đầu nhựa của phích để rút, cắm điện, không kéo mạnh dây điện, không chạm vào phích khi tay ướt.
- Nếu dây điện của máy giặt bị hư hỏng, hãy thay bằng dây chuyên dụng từ nhà sản xuất hoặc từ trung tâm dịch vụ.

⚠ Cảnh báo

1. Máy giặt phải được nối đất cẩn thận. Trong trường hợp mạch điện bị hở, nối đất sẽ làm giảm nguy cơ sốc điện. Máy đã được trang bị dây nguồn, phích cắm và dây nối đất.
2. Để tránh tình trạng cầu chì bị quá tải, không sử dụng máy giặt cùng lúc với các thiết bị điện khác.

Cách sử dụng máy giặt

Những việc chuẩn bị và kiểm tra trước khi giặt

Vui lòng đọc kỹ hướng dẫn này để tránh rắc rối cho máy giặt và làm hư hại quần áo

Kiểm tra quần áo giặt lần đầu có bị ra màu không

Tẩm nước xả vải một chiếc khăn trắng và lau thử vào phần vải ít nhìn thấy của quần áo. Kiểm tra xem khăn có bị dính màu từ quần áo không.

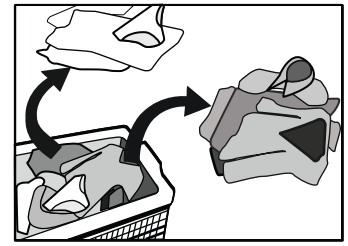

Đối với khăn choàng và các chất liệu dễ ra màu, hãy giặt riêng bên ngoài trước khi cho vào máy giặt cùng với những quần áo khác.
Đối với vết bẩn trên cổ áo, cánh tay áo, túi quần, giặt bằng nước xả vải và chà nhẹ bằng bàn chải, sau đó cho vào máy giặt để đạt được kết quả giặt tối ưu.
Đối với những quần áo nhạy cảm với nhiệt độ, hãy giặt theo hướng dẫn riêng cho từng loại vải để tránh đổi màu và gây biến dạng.

Ghi nhớ:
Để quần áo đã giặt ở trong máy qua lâu dễ khiến quần áo bị mốc. Do đó, luôn nhớ canh thời gian để lấy quần áo ra sau khi giặt. Quần áo cũng dễ bị đổi màu và nhăn nếu giặt ở nhiệt độ không thích hợp.

Clothes that can not be washed by washing machine
Những loại vải bị biến dạng khi ngâm trong nước:
Ca-vát, áo ghi-lê, áo vest, các loại áo khoác v.v..; quần áo dễ phai màu như vải sợi tổng hợp, quần áo kiểu (kiểu nhăn, in nổi, đính hạt…) sẽ co lại khi ngâm trong nước quá lâu.

Vải len và cotton thuộc chất liệu lụa nhăn nên dễ bị biến dạng khi giặt, hạn chế giặt các chất liệu có lông tơ;
Quần áo có đính vật trang trí, váy v.v… là những chất liệu dễ ra màu.
Luôn giặt quần áo theo yêu cầu cụ thể có ghi trên nhãn hiệu từ nhà sản xuất.
Không giặt quần áo đã bị dính hóa chất như xăng, dầu, benzen, chất pha loãng sơn, cồn….

Lưu ý về bột giặt, nước xả vải

Hãy dùng nước xả vải ít bọt, bột giặt thường, bột giặt chuyên dụng phù hợp với loại máy giặt và các yêu cầu như chất liệu vải (cotton, sợi tổng hợp, vải mỏng, len); màu sắc, nhiệt độ giặt, vải bẩn nhiều hay ít. Sử dụng nước xả nhiều bọt sẽ làm trào nước ra ngoài máy và dễ gây tai nạn.
Dung dịch tẩy trắng có chứa kiềm. Nên sử dụng càng ít càng tốt để tránh làm hư quần áo. Xả sạch quần áo với nước để loại bỏ cặn, đốm màu bám trên vải khi dùng bột giặt.
Cho quá nhiều bột giặt hoặc nhiệt độ nước quá thấp sẽ làm cặn bột giặt đọng lại trên quần áo, trong ống nước và khoang giặt.
Khi giặt, nên lưu ý đến khối lượng quần áo, độ dơ của vải, lực nước chảy cũng như tham khảo chỉ định từ bao bì bột giặt.

Lưu ý:

Để bột giặt và các chất phụ gia ở nơi khô ráo, tránh xa tầm tay trẻ em.

Lấy tất cả vật dụng ra khỏi túi

Kiểm tra túi quần, túi áo trước khi giặt, bỏ các vật cứng, sắc nhọn như tiền xu, ghim quần áo, kẹp tóc…để không làm hỏng máy.

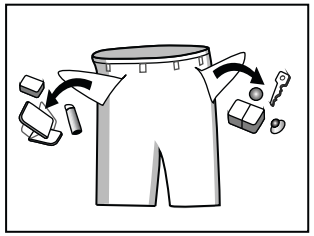

Trước khi giặt, cần phân loại quần áo theo đặc điểm sau:

Quần áo được phân biệt thành các loại cotton, vài sợi pha, sợi tổng hợp, lụa, len, sợi nhân tạo.

Màu sắc: trắng và những màu sắc khác. Quần áo mới mua có màu phải được giặt riêng.
Kích thước: nên chọn quần áo có nhiều kích cỡ khác nhau để tăng hiệu quả giặt.
Độ nhạy cảm: vải mỏng nên giặt riêng. Chọn chế độ giặt cho vải mỏng đối với vải len mới giặt lần đầu, rèm cửa, lụa. Tham khảo chất liệu vải trên mác quần áo để giặt đúng.
Quần áo cần được phân loại trước khi cho vào máy. Tháo móc treo trước khi cho rèm cửa vào giặt.
Lật ngược quần áo có hoa văn trang trí như nút, đồ thêu khi cho vào giặt để tránh làm hư máy.

Quần áo có khóa kéo :

Cải nút, kéo phéc mơ tuya, cố định móc khóa trên quần áo. Dây lưng quần, ruy băng nên buộc lại với nhau.

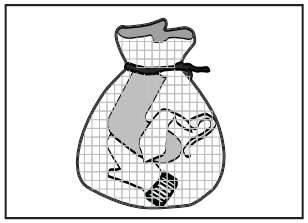

⚠ Buộc áo lót vào túi giặt có cài khóa để tránh gọng kim loại trong áo lòi ra làm hư máy.
Các loại vải mỏng như rèm cửa có ren, vớ, khăn tay, ca-vát nên được bỏ vào túi giặt.
Chỉ giặt lần lượt khoảng từ 1 đến 2 loại quần áo to, cồng kềnh như khăn tắm lớn, áo khoác mặc mùa Đông, quần Jeans v.v.. để tránh cho máy bị quá tải, mất cân bằng và khó vắt hết nước.

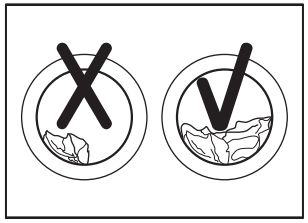

Clean Giũ sạch bụi, lông thú nuôi trên quần áo

Quần áo sẽ bị hư hỏng trong quá trình giặt khi ma sát với bụi, thuốc màu, lông thú nuôi.

Bảo vệ da trẻ em

Quần áo, khăn cho trẻ em kê cả khăn ăn phải được giặt riêng khỏi quần áo người lớn, để không bị lây vi khuẩn. Cần tăng thời gian xả sạch bột giặt trên quần áo của trẻ.

Những phần quần áo dễ bị dính bẩn như vớ, cổ áo, cánh tay áo v.v… nên được giặt sơ bằng tay trước khi cho vào máy để tăng hiệu quả giặt.

Chỉ sử dụng bột giặt và nước xả vải. Các vụn nhỏ từ xà phòng cục dễ bị dính vào các kẽ hở trên quần áo.

Kiểm tra trọng tải máy giặt:
Để đồ giặt trong máy giặt quá nhiều sẽ gây ảnh hưởng đến chất lượng giặt. Hãy tham khảo bảng trọng lượng tối đa cho máy giặt:

Fiber Type	Maximum Loading Capacity					
	6.0kg	7.0kg	8.0kg	9.0kg	10.0kg	12.0kg
Cotton	6.0kg	7.0kg	8.0kg	9.0kg	10.0kg	12.0kg
Sợi tổng hợp	3.0kg	3.5kg	4.0kg	4.5kg	5.0kg	6.0kg
Len	2.0kg	2.0kg	2.0kg	2.0kg	2.0kg	2.0kg
Nhạy cảm	2.5kg	2.5kg	2.5kg	2.5kg	2.5kg	2.5kg

Lật trái quần áo có chất liệu vải bông
Vải bông nên được giặt riêng để tránh bụi đọng trong máy, tránh tiếng ồn trong lúc giặt…
Quần áo có màu đen, vải cotton phải giặt riêng để không lấy màu qua những quần áo màu khác.

Không giặt vật liệu không thấm nước (Đồ trượt tuyết, rèm cửa)
Không nên giặt những loại vải không thấm nước như bao gối, đồ trượt tuyết, áo mưa, vải dù, túi ngủ, bọc xe hơi,… để tránh cho máy bị tràn nước, gây tiếng ồn trong quá trình xả, vắt và làm hư quần áo.

Lưu ý khi vắt
Vắt những loại quần áo thường
Moistures of washings are drained through drain hole.
Nước đọng trong quần áo sẽ được vắt, xả qua lô thoát nước ở máy.
Vắt quần áo không thấm nước và vải sợi.
Ở chế độ giặt thường, vải không thấm nước và vải sợi khó có thể vắt sạch nước, bởi vì lực li tâm của nước không được trải đều qua các lỗ thoát nước trong máy, khiến máy rung lắc mạnh và dễ bị lệch.

■ Khởi động nhanh

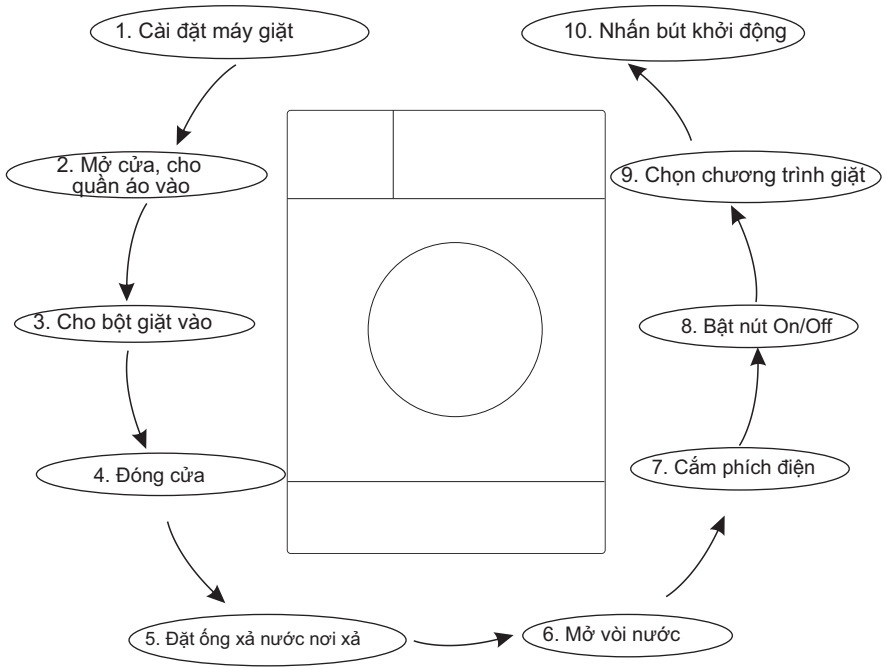

Lưu ý sau khi giặt:
1.Máy sẽ kêu tiếng bíp sau khi giặt xong
2.Khóa vòi nước
3. Nhấn nút tắt On/Off và rút dây điện.

Bảng điều khiển

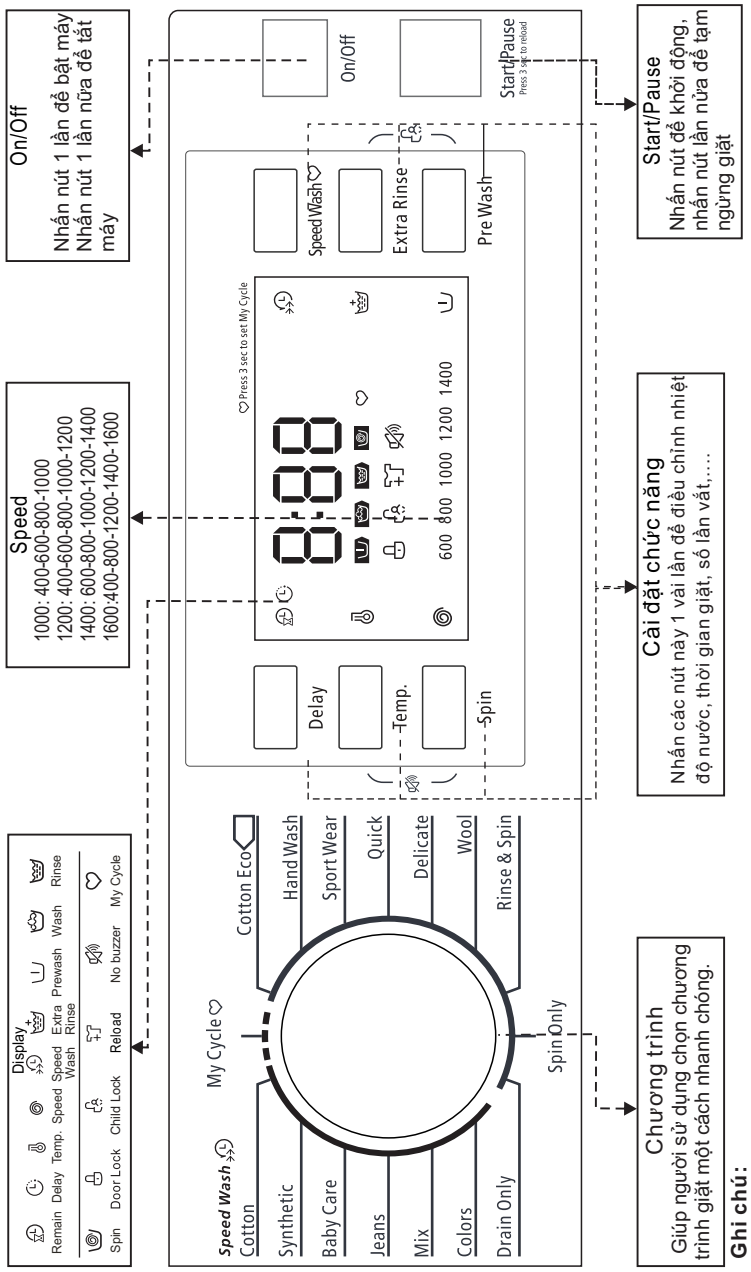

Ghi chú:

1. Bảng điều khiển này chỉ mang tính chất tham khảo, hãy xem kỹ máy mà bạn đang dùng để tránh nhầm lẫn.
2. Bảng điều khiển có thể hơi khác với máy trên thực tế, hãy vào website của nhà sản xuất hoặc gọi đường dây nóng để biết thêm chi tiết.
3. Khi các đèn chỉ tốc độ quay (600, 800, 1000, 1200, 1400) không còn sáng nghĩa là tốc độ quay đang bằng 0.

Giặt quần áo lần đầu tiên

Trước khi sử dụng máy giặt lần đầu, hãy để máy chạy mà không có quần áo bên trong theo hướng dẫn sau:

1.Cắm điện và mở vòi nước
2.Cho ít bột giặt vào ngăn đựng chất tẩy rửa
3.Bật nút On/Off
4.Nhấn nút khởi động “Start/Pause”.

Ngăn đựng chất tẩy rửa được chia như sau:

I: Chất tẩy nhẹ hoặc bột giặt
II: Chất tẩy rửa chính
❀ : Chất làm mềm vải, nước giặt thảm.

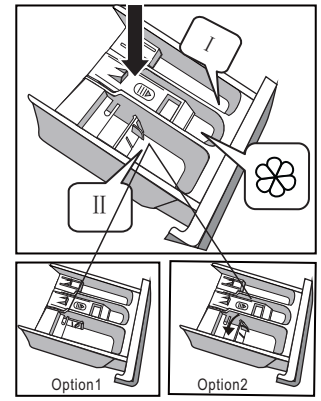

Cho bột giặt vào máy

1.Kéo ngăn đựng chất tẩy rửa ra
2.Cho chất tẩy nhẹ vào ngăn (Tùy chọn)
3.Cho chất tẩy chính vào ngăn
(Bột giặt hoặc nước xả vải)
4.Cho chất xả vải vào ngăn ❀ (tùy chọn)

Ghi chú:

- Đối với các loại bột giặt, nước xả đậm đặc hoặc dễ kết tủa, nên làm loãng với nước trước khi cho vào ngăn đựng để nước giặt được sử dụng hết và tránh bọt tràn ra ngoài.
- Chọn chất tẩy rửa phù hợp với từng nhiệt độ khác nhau để cho hiệu quả giặt tốt nhất, tiết kiệm điện và thời gian giặt.

Khởi động máy giặt

Cắm điện cho máy. Kiểm tra xem ống nước đã được nối chắc chắn chưa. Mở vòi cấp nước. Cho quần áo và bột giặt vào máy. Nhấn nút nguồn On/Off, chọn chương trình giặt thích hợp, chức năng giặt và nhấn nút Start/Pause.

Chọn chương trình giặt

Chương trình giặt được chọn dựa vào từng loại vải, khối lượng, mức độ bẩn của vải và được chia thành các nhiệt độ giặt như sau:

90 ℃	Vải bẩn nhiều, cotton hoặc vải lanh trắng (ví dụ: khăn trải bàn cà phê, khăn trải bàn ăn, khăn tắm, ga giường)
60 ℃	Vải bẩn nhẹ, vải lanh, cotton, vải sợi tổng hợp có nhuộm màu và có độ ra màu nhất định như: áo sơ mi, đồ ngủ, vaỉ lanh trắng (dễ dính màu)
40 ℃,30 ℃, 20 ℃, Nước lạnh	Chất liệu vải bị dính bẩn thông thường (sợi tổng hợp, len)

Đầu tiên, vặn nút xoay để chọn chương trình giặt dựa theo loại vải.

Tiếp theo, chọn nhiệt độ giặt dựa vào độ bẩn của quần áo. Thông thường, nhiệt độ giặt càng cao, lượng điện tiêu thụ càng nhiều.

Cuối cùng, chọn tốc độ quay. Tốc độ quay lớn sẽ giúp quần áo mau khô hơn nhưng đồng thời cũng làm máy kêu to hơn. Vải nhạy cảm sẽ dễ bị nhăn khi được quay ở tốc độ cao.

LƯU Ý: để không làm hư quần áo có vải mỏng, vải nhạy cảm, hãy chọn tốc độ quay thấp. Sau đây là sơ lược về công dụng của từng chương trình giặt:

- Cotton
Đây là chế độ giặt phổ biến nhất. Mức độ giặt khá mạnh để loại bỏ bụi bẩn. Nên sử dụng chương trình giặt này cho quần áo cotton mặc hằng ngày như ga giường, bao gối, đồ ngủ, đồ lót…
- **Cotton ECO**
Đây là chương trình giúp tăng hiệu quả giặt bằng cách thêm thời gian giặt. Được sử dụng cho quần áo trẻ em và những người dễ bị dị ứng.
- Sợi tổng hợp
Dành cho quần áo mỏng. Thời gian và mức độ giặt đều thấp hơn chương trình giặt cotton. Được dùng cho vải tổng hợp như áo sơ mi, áo khoác, rèm cửa, vải ren… Khi giặt vải len, chú ý cho bột giặt ít hơn để tránh làm bung xơ vải và tạo nhiều bọt.
- Chăm sóc trẻ em
Giúp quần áo của trẻ sạch tối đa bằng cách giặt và xả nước kỹ hơn.
- **Đồ Jeans**
Chương trình giặt được thiết kế cho đồ Jeans.
- Hỗn hợp
Chế độ này có thời gian giặt cao và mức độ giặt mạnh hơn dành cho chất liệu khó giặt như ga giường, áo choàng tắm, áo gối, áo lót.
- Vải màu
Dùng cho vải sáng màu để tránh tình trạng phai màu.
- Chế độ vắt
Chỉ có hoạt động vắt.
- Chế độ quay
Chỉ có hoạt động quay. Nước xà phòng và nước xả quần áo sẽ được thải ra ngoài trong quá trình quay.
- Chế độ xả và vắt
Chỉ có hoạt động xả và vắt.

- Len
Chỉ giặt vải theo nhiệt độ với lượng bột giặt vừa đủ theo yêu cầu của nhà sản xuất quần áo (xem trên mác quần áo)
- Vải nhạy cảm
Dùng để giặt nhẹ nhàng các loại vải nhạy cảm với cường độ giặt và tốc độ quay ít hơn.
- Giặt nhanh
Chế độ giặt cho quần áo có số lượng ít và không bị dơ nhiều.
– **Đồ thể thao**
Dùng cho quần áo thể thao.
- Giặt tay
Giặt bằng nước lạnh cho quần áo ít bẩn.
- Chương trình giặt ưa thích
Nhấn và giữ nút tốc độ giặt khoảng 3 giây để máy lưu lại chương trình giặt mà bạn yêu thích. Chế độ giặt ưa thích mặc định lúc đầu của máy là giặt cotton.

Sơ lược các chức năng giặt:

- Giặt sơ bộ
Giặt sơ trước khi giặt chính thức.
- Thời gian giặt
Điều chỉnh thời gian giặt.
- Xả vải thêm
Máy sẽ tăng số lần xả cho quần áo.
- Hẹn giờ khởi động
Bạn có thể dùng chức năng này để hẹn giờ khởi động trong vòng 24 tiếng.
Cách hẹn giờ như sau:
1. Chọn chương trình giặt.
2. Nhấn nút Delay để hẹn giờ.
3. Nhấn nút Start/Pause để bắt đầu đếm ngược.

Để xóa chức năng hẹn giờ: trước khi nhấn Start/Pause, ấn và giữ nút Delay cho đến khi màn hình trở về 0h. Nếu đã lỡ nhấn Start/Pause, nhấn nút On/Off để hủy hẹn giờ.
Ghi chú: nếu nguồn điện bị ngắt giữa chừng, máy sẽ tự động lưu lại chương trình giặt. Khi có điện trở lại, nhấn Start/Pause để tiếp tục giặt.
▪Thêm quần áo giặt
Chức năng này có thể thực hiện trong quá trình giặt. Khi bạn thấy nước trong lồng giặt quá nhiều và có nhiệt độ cao, hãy ấn và giữ Start/Pause khoảng 3 giây và cho thêm quần áo cần giặt vào.
Cách sử dụng chức năng này như sau:

1. Giữ nút Start/Pause và đợi đến khi lồng giặt ngừng quay.
2. Mở cửa.
3. Cho thêm quần áo cần giặt, đóng cửa và ấn lại Start/Pause.

▪Khóa trẻ em

Chế độ này giúp bảo đảm an toàn cho trẻ và tránh làm máy ngắt quãng trong quá trình giặt. Khi bật khóa trẻ em, tất cả các nút trừ nút On/Off sẽ dừng hoạt động. Máy giặt sẽ tự động lưu chương trình khóa trẻ em khi bạn giặt vào lần sau. Cài đặt chế độ khóa trẻ em bằng cách ấn đồng thời nút Extra Rinse và Nút Pre Wash khoảng 3 giây cho đến khi bạn nghe tiếng bíp. Nút Start/Pause và nút xoay chọn chương trình giặt cũng sẽ bị khóa. Ấn đồng thời nút Extra Rinse và Nút Pre Wash cho đến khi bạn nghe tiếng bíp để hủy chế độ khóa trẻ em. Không thể hủy chế độ khóa trẻ em trong khi máy đang giặt trừ khi bạn rút điện.

▪Tắt âm thanh

Máy sẽ kêu tiếng bíp khi chương trình giặt hoàn thành. Để tắt âm thanh, nhấn đồng thời nút “Temp.&Spin” khoảng 3 giây cho đến khi nghe tiếng bíp. Bật lại âm thanh cũng bằng cách nhấn đồng thời nút “Temp.&Spin” khoảng 3 giây cho đến khi nghe tiếng bíp. Cài đặt của bạn sẽ được lưu cho những lần giặt sau.

▪Loại bỏ bọt xà phòng

Cho quá nhiều bột giặt sẽ làm thừa bọt xà phòng, làm giảm hiệu quả giặt, xả của máy. Chức năng kiểm tra bọt sẽ tự động loại bỏ bọt xà phòng thừa trong máy.

■

Chương trình / Mô tả	Trọng Tải(kg)				Ngăn đựng bột giặt			Hẹn giờ	Tốc độ giặt	Xả thêm	Giặt nước	Nhiệt độ (℃)	Thời gian giặt (H)						Số vòng quay (RPM)		
														6.0kg		7.0/8.0kg					
	6.0	7.0	8.0		Case I	Case II	Softener Case						1000	1200	1400	1200	1400	1000	1200	1400
Cotton	6.0	7.0	8.0		○	●	○	○	○	○	○	40	2:40	2:40	2:40	2:40	2:40	800	800	800
Vải tổng hợp	3.0	3.5	4.0		○	●	○	○	○	○	○	40	1:40	1:40	1:40	1:40	1:40	800	800	800
Cho trẻ em	6.0	7.0	8.0		○	●	○	○	○	○	○	30	1:20	1:20	1:20	1:20	1:20	800	800	800
Jeans	6.0	7.0	8.0		○	●	○	○	○	○	○	60	1:45	1:45	1:45	1:45	1:45	800	800	800
Hỗn hợp	6.0	7.0	8.0		○	●	○	○	○	○	○	40	1:13	1:13	1:13	1:13	1:13	800	800	800
Vải màu	3.0	3.5	4.0		×	●	○	○	○	○	×	Cold	1:10	1:10	1:10	1:10	1:10	800	1000	1000
Chỉ xả nước	–	–	–		×	×	○	○	×	×	×	–	0:01	0:01	0:01	0:01	0:01	–	–	–
Chỉ vắt	6.0	7.0	8.0		×	×	×	○	×	×	×	–	0:12	0:12	0:12	0:12	0:12	800	800	1000
Vắt và xả	6.0	7.0	8.0		×	×	○	○	×	○	×	–	0:20	0:20	0:20	0:20	0:20	800	800	1000
Len	2.0	2.0	2.0		×	●	○	○	×	○	×	40	1:07	1:07	1:07	1:07	1:07	600	600	600
Vải mỏng	2.5	2.5	2.5		×	●	○	○	×	○	×	30	0:50	0:50	0:50	0:50	0:50	600	600	600
Giặt nhanh	2.0	2.0	2.0		×	●	○	○	×	×	×	Cold	0:15	0:15	0:15	0:15	0:15	800	800	800
Đồ thể thao	3.0	3.5	4.0		○	●	○	○	×	○	○	40	0:45	0:45	0:45	0:45	0:45	1000	1200	1200
Giặt tay	2.0	2.0	2.0		○	●	○	○	×	○	○	Cold	1:00	1:00	1:00	1:00	1:00	600	600	600
Cotton ECO	6.0	7.0	8.0		×	●	○	○	×	×	×	60	2:51	3:04	2:51	3:06	2:53	1000	1200	1400

Loại năng lượng A+++ Chương trình thử nghiệm năng lượng: chế độ giặt cotton ECO 60/40°C , tốc độ: ở mức cao nhất; các chương trình khác ở chế độ mặc định

Trọng tải phân nửa cho máy có lồng giặt 9.0/10.0/12.0 kg là 4.5/5.0/6.0kg.

Chế độ giặt cotton ECO 60/40°C là chương trình giặt chuẩn. Để biết thêm chi tiết, vui lòng tham khảo nhãn dán năng lượng ở các trang dưới. Chế độ giặt này phù hợp với những loại quần áo cotton thông thường, giúp tiết kiệm lượng tiêu thụ điện, nước. Nhiệt độ giặt ở bảng trên có thể hơi khác so với thực tế.

● Bắt buộc O Tùy chọn X Không cần thiết

Ghi chú: các thông số ở bảng trên chỉ nhằm mục đích tham khảo. Số liệu trên thực tế có thể hơi khác tùy từng model máy.

Bạn có thể chọn chương trình giặt riêng cho quần áo sáng màu để giữ quần áo luôn mới.

⚠ WARNING

- Không được cho dung môi hòa tan vào trong máy vì các chất này có thể gây độc hoặc cháy nổ.
- Không dùng nước để trực tiếp xịt rửa máy giặt.
- Không sử dụng chất tẩy có chứa PCMX (Para Chloro Meta Xylenol) để rửa máy giặt.

■ Làm sạch và bảo trì khoang giặt

Bảo trì máy giặt đúng cách giúp tăng tuổi thọ của máy. Nếu cần, mặt ngoài của máy có thể được lau bằng chất tẩy loãng không ăn mòn. Nếu có tình trạng rò rỉ nước, sử dụng vải mềm để thấm nước ngay.
Ghi chú: không dùng chất tẩy có chứa axit formic hoặc những chất tương tự để lau máy.

■ Làm sạch mâm giặt

Gỉ sét bên trong mâm giặt có thể được lau sạch bằng chất tẩy không chứa clo. Không dùng miếng chùi xoong nồi để cọ mâm giặt.

■ Xử lý máy giặt bị đông lạnh

Khi nhiệt độ ngoài trời dưới 0^0C, máy giặt của bạn có thể bị đóng băng. Khắc phục bằng cách:
1. Rút dây điện ra.
2. Rửa vòi cấp nước của máy bằng nước ấm.
3. Tháo ống nước ra và ngâm vào nước ấm.
4. Đổ nước ấm vào mâm giặt và để khoảng 10 phút.
5. Lắp ống nước vào chỗ cũ, bảo đảm rằng nước không bị rò rỉ.

Ghi chú: chỉ sử dụng lại máy giặt khi nhiệt độ ngoài trời trên 0^oC.

■ Chống đông máy

Nếu máy giặt được đặt trong phòng dễ bị đóng băng, hãy rút hết nước trong ống cấp nước ra ngoài.

Cách tháo vòi cấp nước trong máy:
1. Khóa vòi nước.
2. Tháo ống nước ra khỏi vòi, đặt 1 đầu ống nước vào bồn chứa.
3. Cho nước thoát hết ra ngoài.
4. Gắn ống nước trở lại vào vòi.

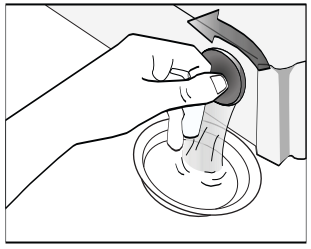

⚠ WARNING

Để tránh bị bỏng, hãy đợi cho nước nóng trong máy nguội hẳn rồi mới tiến hành các bước trên.

■ Làm sạch ngăn đựng bột giặt

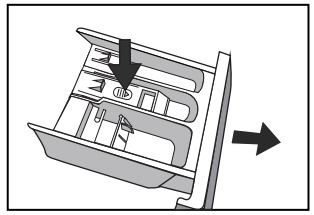

1. Kéo ngăn đựng theo chiều mũi tên.
2. Nhấc đầu ngăn lên và rút ra khỏi máy hoàn toàn, rửa sạch hốc dựng ngăn bột giặt.
3. Đặt ngăn bột giặt trở lại máy.

■ Làm sạch màng lọc nước

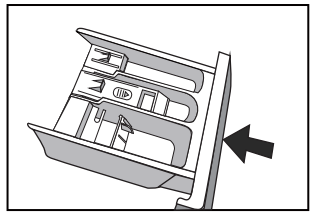

Làm sạch màng lọc trong vòi cấp nước giúp máy đưa nước vào khoang giặt hiệu quả hơn. Làm theo các bước sau: **(Giai đoạn A)**

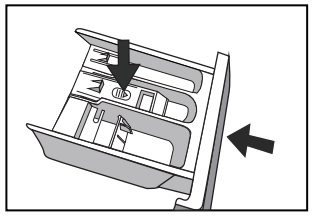

1. Khóa vòi nước.
2. Chọn một chương trình giặt bất kỳ trừ chương trình "giặt" và "vắt"
3. Nhấn nút khởi động Start / Pause và để máy chạy 40 giây.
4. Tháo ống cấp nước ra khỏi vòi nước.
5. Dùng nước để làm sạch màng lọc.
6. Gắn ống nước trở lại vòi.

Cách rửa màng lọc trong ống nạp nước của máy: **(Giai đoạn B)**

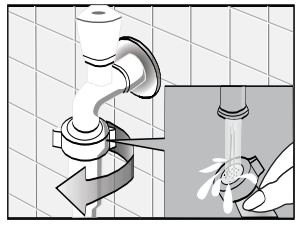

1. Tháo ống nạp nước đằng sau máy
2. Kéo màng lọc ra bằng kềm mũi nhọn, rửa sạch màng lọc rồi gắn lại vào máy.
3. Gắn lại ống nạp nước đằng sau máy
4. Mở vòi nước và kiểm tra xem nước có rỉ ra không.
5. Khóa vòi nước.

Ghi chú: thông thường, màng lọc từ vòi cấp nước phải được rửa trước tiên rồi mới đến màng lọc từ ống nạp nước trong máy giặt. Sau khi làm sạch hết các màng lọc, lặp lại bước 1, 2, 3 trong giai đoạn A để làm sạch hoàn toàn.

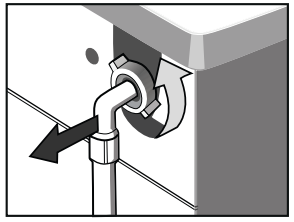

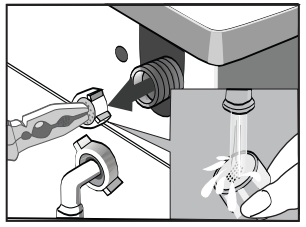

Bảo trì

⚠ WARNING

Máy giặt không được cắm điện khi đang cho quần áo vào để tránh bị giật điện.
Sau khi sử dụng, rút dây điện ra và đóng kín cửa máy giặt.

■ **Khắc phục vấn đề phát sinh**

Làm sạch màng lọc trong máy

Trên màng lọc thỉnh thoảng đọng lại các sợi vải và những vật lạ sau khi giặt.
Nên rửa màng lọc định kỳ để máy hoạt động trơn tru.

⚠ WARNING

Nếu thường xuyên giặt nhiều quần áo bẩn, bạn nên kiểm tra màng lọc định kỳ.
Trong trường hợp phát hiện máy không thể xả nước hoặc không quay vắt được, kiểm tra ống bơm nước của máy.
Các nguyên nhân chính gây ra tiếng ồn bất thường trong máy là do ống bơm nước bị tắc bởi những vật như đồng xu, kim băng…
Vệ sinh bơm xả theo các bước sau:

1.Rút dây điện, mở cửa bơm xả.

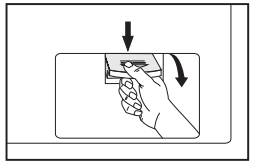

2.Vặn ống theo hình dưới để kéo ống xả ra.

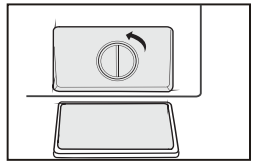

3. Lần lượt đặt ống xả, nắp đậy về vị trí cũ.

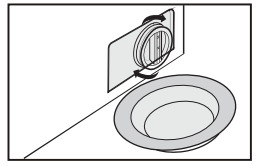

Chú ý!
Ống xả nước đôi khi có chứa nước nóng tùy theo chương trình giặt. Để tránh bị bỏng, hãy đợi sau khi máy giặt xong thì mới bắt đầu lau chùi. Đậy chặt nắp bảo vệ để tránh rò rỉ nước.

Sự cố thường gặp

Sự cố	Nguyên nhân	Giải pháp
Máy giặt không khởi động		Kiểm tra cửa đóng chặt chưa. Kiểm tra nguồn điện Kiểm tra nguồn cấp nước Bấm lại nút Start/Pause Bấm lại nút On/Off
Không thể mở cửa	Máy giặt có chế độ an toàn trong lúc giặt	Ngắt kết nối nguồn điện
Hệ thống sấy bị lỗi	Ống sấy cũ, hệ thống cảm biến nhiệt NTC bị hư	Có thể giặt chế độ thường. Liên hệ trung tâm chăm sóc khách hàng
Rò rỉ nước	Ống nước chưa gắn chặt vào vòi nước. Ống xả nước bị tắc	Kiểm tra và siết chặt ống nước vào vòi. Làm sạch ống xả nước và tìm người có chuyên môn để khắc phục sự cố nếu cần.
Nước tràn qua nóc máy giặt	Ống dẫn nước chưa gắn chặt vào máy. Ống xả bị rò rỉ.	Sửa ống dẫn nước. Thay ống xả
Màn hình không sáng đèn	Máy chưa có điện Màn hình bị hỏng Phần cứng trong máy trục trặc	Cắm lại dây điện. Kiểm tra nguồn điện trong nhà. Liên hệ trung tâm dịch vụ.
Bột giặt đọng trong ngăn chứa chất tẩy	Bột giặt bị ẩm và kết tủa	Lau sạch ngăn đựng. Sử dụng bột giặt dạng nước hoặc bột giặt dành riêng cho máy.
Hiệu quả giặt không tốt	Quần áo quá bẩn. Chất lượng bột giặt không tốt.	Chọn chương trình giặt phù hợp. Cho lượng bột giặt đầy đủ theo hướng dẫn trên bao bì bột giặt.
Máy rung lắc mạnh, có tiếng ồn		Đặt máy cố định trên mặt phẳng. Tháo các chốt bảo vệ khi vận chuyển máy. Kiểm tra xem có kẹp tóc hoặc vật kim loại trong máy không. Điều chỉnh chân máy cho cân đối

Khắc phục vấn đề

Màn hình hiển thị	Giải thích	Nguyên nhân	Giải quyết
E30	Cửa bị lỗi	Cửa chưa được đóng hoàn toàn	Khởi động lại máy sau khi đóng chặt cửa
		Liên hệ trung tâm dịch vụ nếu sự cố vẫn còn.	
E10	Vấn đề khi bơm nước	Vòi nước chưa mở hoặc dòng nước chảy chậm. Màng lọc trong van bơm nước bị tắc. Ống bơm bị xoắn. Cúp nước	Mở vòi cấp nước và đợi đến khi dòng nước chảy bình thường. Kiểm tra màng lọc ở van bơm. Làm thẳng ống nước. Tìm vòi cấp nước khác trong nhà.
		Liên hệ trung tâm dịch vụ nếu sự cố vẫn còn.	
E21	Vấn đề khi xả nước	Ống xả bị tắc hoặc xoắn. Bộ phận xả nước bị tắc.	Làm sạch và kéo thẳng lại ống xả. Rửa sạch bộ phận xả
		Liên hệ trung tâm dịch vụ nếu sự cố vẫn còn.	
Liên hệ trung tâm dịch vụ nếu các sự cố trên vẫn còn.			

Phụ lục

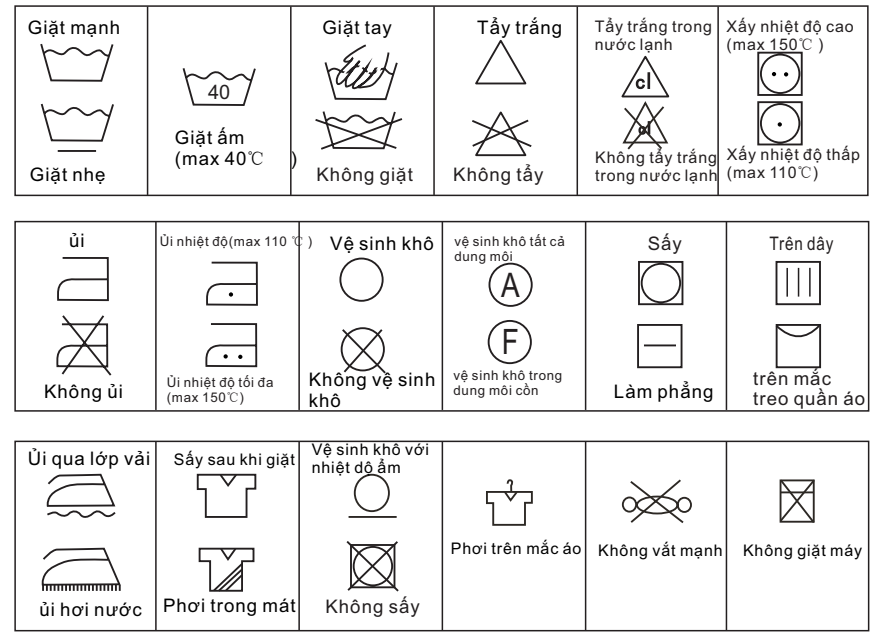

Electrical Warning

Để tránh cháy nổ, điện giật và các tai nạn khác, xin hãy lưu ý những điều sau:

- Chỉ sử dụng nguồn điện có điện áp theo yêu cầu của máy. Nếu không rõ điện áp ở nhà, liên hệ cơ quan điện ở địa phương để biết chi tiết.
- Khi sử dụng chức năng sấy, dòng điện tối đa chạy qua máy là 10A. Do đó phải đảm bảo nguồn điện trong nhà (dòng điện, điện áp, dây điện) đáp ứng được mức tải của máy.
- Đặt dây điện ở một chỗ cố định để không ai bị vấp gây tai nạn hoặc làm dây bị hư. Lưu ý đến ổ cắm điện, ổ điện phải được đặt ở nơi an toàn, phích phải vừa với máy.
- Không để ổ điện âm tường bị quá tải, dây điện bị căng vì dễ gây cháy và giật điện. Không rút dây điện bằng tay ướt.
- Để bảo đảm an toàn, hãy sử dụng ổ cắm có dây nối đất. Phải chắc chắn ổ cắm được nối đất an toàn

Thông số kỹ thuật

Thông số				
Khối lượng giặt	6.0kg	7.0kg	8.0kg	9.0kg
Kích thước(W*D*H)	595*470*850	595*495*850	595*565*850	595*565*850
Trọng lượng	54kg	61kg	70kg	71kg
Công suất	2000W	2050W	2000W	2000W
Điện áp	220-240V~,50Hz	220-240V~,50Hz	220-240V~,50Hz	220-240V~,50Hz
Dòng điện	10A	10A	10A	10A
Áp suất nước	0.05MPa~1MPa	0.05MPa~1MPa	0.05MPa~1MPa	0.05MPa~1MPa

Thông số		
Khối lượng giặt	10.0kg	12kg
Kích thước(W*D*H)	595*565*850	595*585*850
Trọng lượng	72kg	73kg
Công suất	1950W	2000W
Điện áp	220-240V~,50Hz	220-240V~,50Hz
Dòng điện	10A	10A
Áp suất nước	0.05MPa~1MPa	0.05MPa~1MPa

Thông số

Thương hiệu: Malloca
Model: MWM-C1903E

Sức chứa định mức: 8kg
Hiệu quả năng lượng : A+++
EU Ecolabel: N/A

Mức tiêu thụ năng lượng: điện:196 kWh/năm, nước: 1100l, dựa trên 220 chu kỳ giặt thông thường: Cotton Eco 60°C /40°C - đầy đồ và đầy một phần và dùng chế độ giặt tiết kiệm điện. Lượng nước tiêu thụ thực tế sẽ tùy vào cách sử dụng thiết bị.
Hiệu quả vắt: hạng B/B trên thang điểm từ G (ít hiệu qủa nhất) đến A (hiệu quả nhiều nhất)
Tốc độ vắt tối đa: 1200/1400 vòng/phút.
Ước tính tiêu thụ năng lượng (1200 vòng/ phút)

Chương trình tiêu chuẩn	Sức chứa	Mức tiêu thụ điện năng	Mức tiêu thụ nước	Độ ẩm còn lại	Thời gian
Cotton ECO 60°C	8kg	1.05kwh	55L	51%	179min
Cotton ECO 60°C	4kg	0.84kwh	45L	54%	179min
Cotton ECO 40°C	4kg	0.63kwh	45L	54%	179min

Ước tính tiêu thụ năng lượng (1400 vòng/ phút)

Chương trình tiêu chuẩn	Sức chứa	Mức tiêu thụ điện năng	Mức tiêu thụ nước	Độ ẩm còn lại	Thời gian
Cotton ECO 60°C	8kg	1.05kwh	55L	51%	179min
Cotton ECO 60°C	4kg	0.84kwh	45L	54%	179min
Cotton ECO 40°C	4kg	0.63kwh	45L	54%	179min

Ghi chú:

1. Chương trình được dùng để thử nghiệm thiết bị theo tiêu chuẩn EN60456-2011.
2. Các chương trình giặt được thử nghiệm với tải trọng giặt cố định và tôc độ quay tối đa.
3. Các thông số của máy trên thực tế sẽ hơi khác so với bảng trên tùy theo cách sử dụng.

Mức tiêu thụ điện khi máy ở chế độ tắt: 0.5W
Mức tiêu thụ điện khi máy ở chế độ chờ: 1W
Máy giặt gia dụng được trang bị hệ thống quản lý năng lượng.
Thời gian máy ở chế độ chờ: < 1 phút.
Tiếng ồn khi giặt: 59
Tiếng ồn khi vắt: 76/78
Ghi chú: thử nghiệm tiếng ồn trong điều kiện máy giặt/sấy ở chế độ Cotton Eco 60°C-đầy đồ.

BACH HOP KITCHEN APPLIANCES CO., LTD.

Showroom:
279 Nguyen Van Troi Street, Ward 10, Phu Nhuan District, HCM City
Tel: (84) 8 39975 893 / 94Hotline: 1800 12 12
Fax: (84) 8 38447 102
Email: info@malloca.com

Customer Care:
Hotline: 1800 12 12
Email: chamsockh@malloca.com

CÔNG TY TNHH THIẾT BỊ NHÀ BẾP BÁCH HỢP

Showroom:
279 Đường Nguyễn Văn Trỗi, Phường 10, Quận Phú Nhuận, TP.HCM
SĐT: (+84) 8 39975 893 / 94 – (+84) 8 39975 294 / 95
Fax: (+84) 8 38447 102 – (+84) 8 39974 633
Email: info@malloca.com

Hệ thống chăm sóc khách hàng:
Hotline : 1800 12 12
Email: chamsockh@malloca.com

Trung tâm chính
279 Đường Nguyễn Văn Trỗi, Phường 10, Quận Phú Nhuận, TP.HCM
SĐT: (08) 39975 893 / 94 – (08) 39975 294 / 95

Khu vực Bà Rịa Vũng Tàu
258-260A Lê Hồng Phong, Phường 4, TP. Vũng Tàu
SĐT : (064) 385 94 99

Khu vực Tây Nguyên
331 Phan Đình Phùng, Phường 2, TP. Đà Lạt
SĐT : (063) 3521 107 – 0918226362

Khu vực Nam Trung Bộ
08 Lê Hồng Phong, Phường Phước Hải, TP. Nha Trang
SĐT : (058) 3875 488

Khu vực Miền Tây
178 Trần Hưng Đạo , Phường An Nghiệp, Quận Ninh Kiều, TP. Cần Thơ
SĐT : (0710) 373 2035

Khu vực Miền Trung
95 Nguyễn Văn Linh, Phường Vĩnh Trung, Quận Thanh Khuê, TP. Đà Nẵng
SĐT : (0511) 369 1906

Khu vực Miền Bắc
154 Thái Hà, Phường Trung Liệt, Quận Đống Đa, Hà Nội
SĐT : (04) 35376 288 – 093 462 92 98